 



THE KANGAROO ELITE

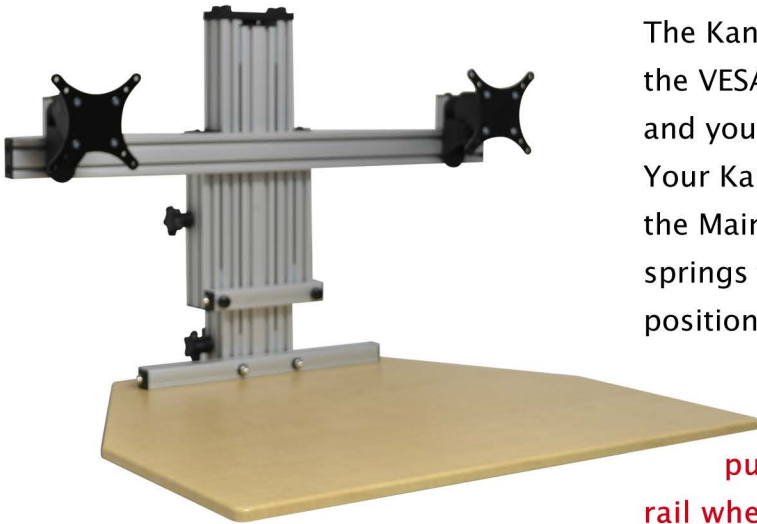

The Kangaroo Elite is designed to hold (2) LCD Monitors on the VESA 75 x 75 or 100 x 100mm compatible brackets and your keyboard and mouse on the main work Surface. Your Kangaroo Elite is shipped in the down position with the Main Brake tightened. The Kangaroo Elite has (2) springs that assist in raising your unit to the standing position and works best when your monitors and keyboard are in place. This reduces the amount of pressure needed to lower the unit. **Always push down with both hands on the horizontal rear rail when lowering the main work surface.**



 To move the mount horizontally closer or farther apart, simply loosen the **bolt** attached to the **horizontal monitor rail (B)** by a single turn with an 5/32 allen wrench. Once you have reached the desired position tighten the bolt.

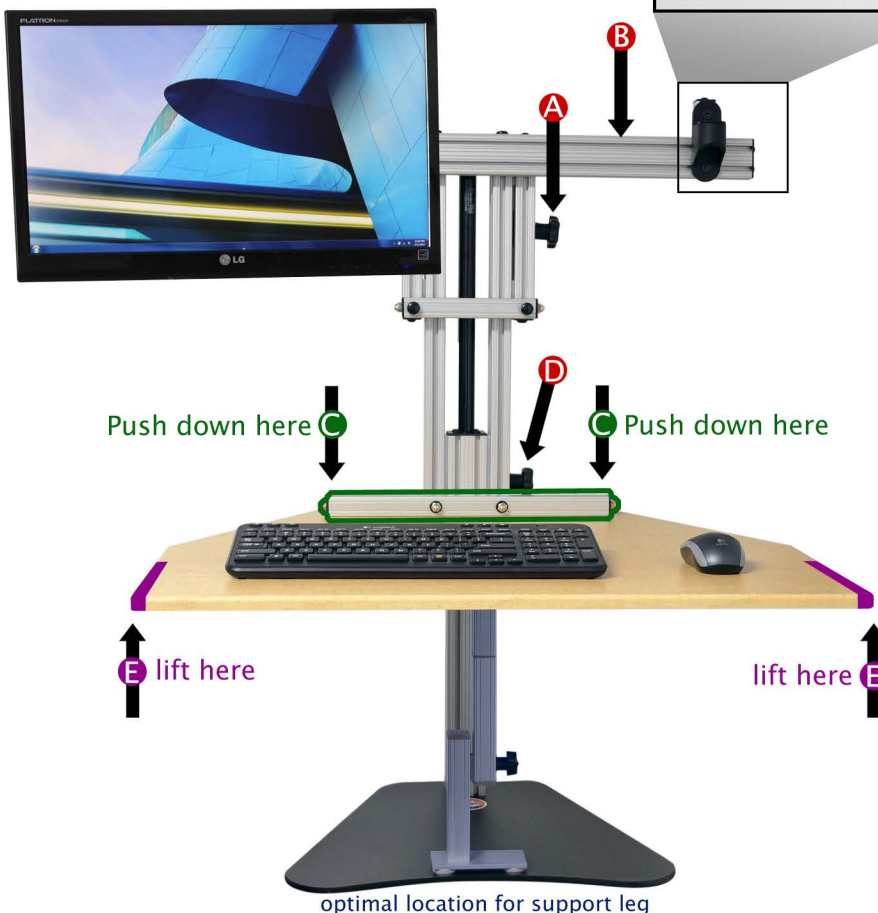

HOW TO USE THE ELITE

To raise the Elite, loosen the main brake(D) and lift the main work surface on the sides(E & E). Once you have the work surface at the required height tighten the main brake.

To lower the Elite, loosen the main brake(D) and lean into the unit using your upper body weight pushing down with both hands on the horizontal bar at the rear of the main horizontal work surface (C & C).

Raise and lower the monitor rail by loosening the monitor brake(A) and either lift up or push down on the monitor rail(B). Once the monitors reach you desired level, tighten the monitor brake.

A. Monitor Brake

B. Horizontal Monitor Rail

C. Work Surface Rail

 
D. Main Brake

E. Main Work Surface



Maximum Size LCD Monitors 25" wide and Weight of 10 lbs
Any questions about The Kangaroo Elite
Contact us at info@ergodesktop.com or 866-232-7988

THE STABILIZATION LEG

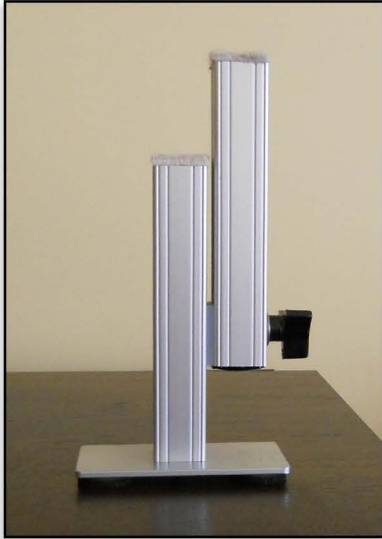

Your adjustable height desk unit comes with an adjustable leg that can be used to give you maximum stability when you are using “The Kangaroo” in the standing position.

 
Raise The Kangaroo work surface to your desired standing height and tighten the work surface brake.

Place the adjustable leg under the work surface and loosen the adjustable leg brake. Only loosen the brake by a turn or two, to much and the brake will disengage from the slot.

Extend the adjustable leg until it engages the bottom of the work surface and then tighten the adjustable leg brake.

The leg is shipped with the **extension section** installed to give you additional height adjustment. If this is too tall for your application, simply **unscrew the extension section**.

- A** Extension Selection
- B** screws into here

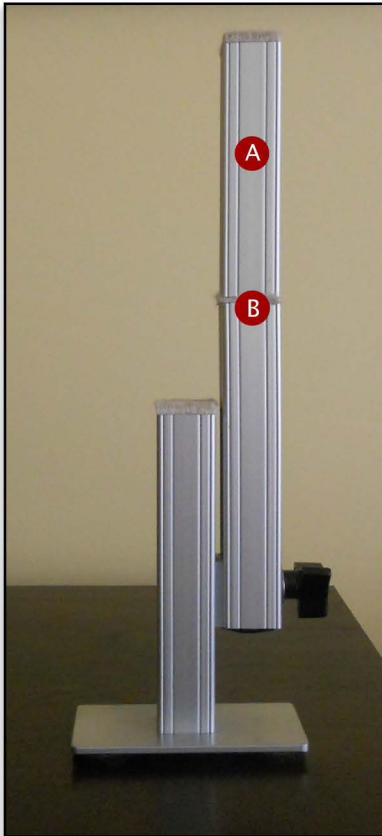

ALWAYS REMOVE LEG BRACE BEFORE LOWERING THE WORK SURFACE.

