



# Heavy Duty VESA Tilt Head

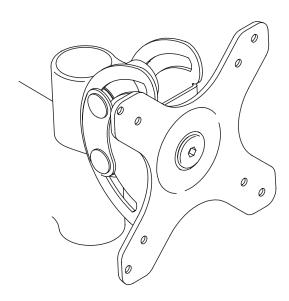

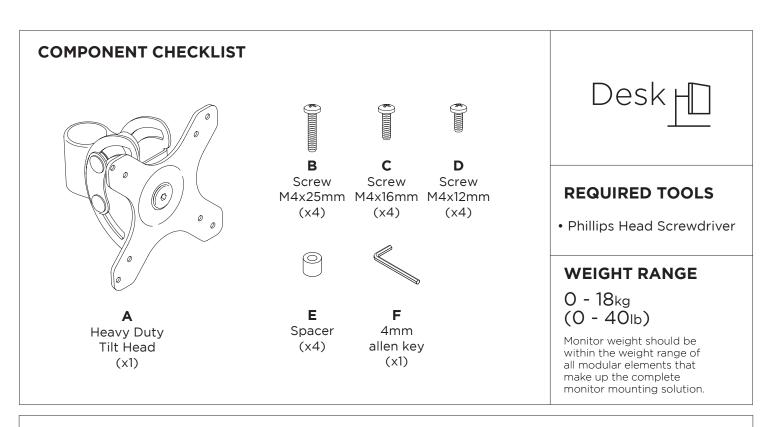


#### IMPORTANT INFORMATION


- ! Please ensure this product is installed as per these installation instructions.
- ! Curved monitors, deep devices (such as all-in-one PCs) and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is compatible with AWM Series monitor arm products: AWM-AHX, AWM-LC, AWM-A46 & AWM-A71.

#### 1. Attach VESA head to monitor

1.1 Screw the VESA head onto monitor

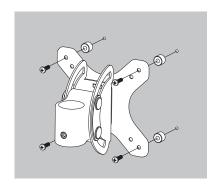

**Note:** Spacers may be required for curved, recessed or uneven monitor surfaces.

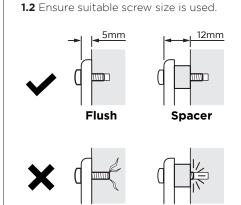


1.3 VESA mounting compatibility

100mm
75mm
100mm
75mm

**Note:** For other sizes, use a suitable adaptor plate

### 2. Mount monitor onto arm


**2.1** Push tilt head onto the shaft at the end of the monitor arm.

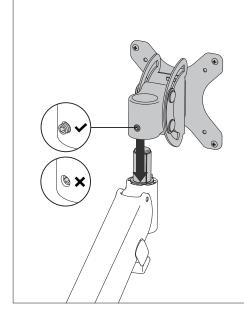


**2.2** Ensure tilt head is fully pushed onto shaft.

Too long

Too short

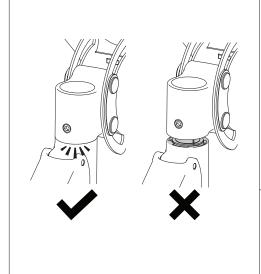

**2.3** Tighten the joint screw to secure the tilt head and monitor in place.

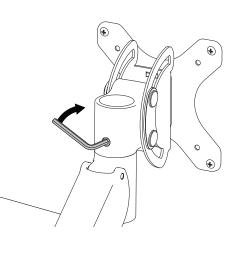

**Note:** Check the arm rotation is smooth after tightening.

## 3. Adjust tilt tension

