

**STEP 1 | COLUMN** ..... Page 3

**STEP 2 | MOUNT** ..... Page 4

**STEP 3 | WORK SURFACE** ..... Page 5

 
**STEP 4 | CENTER BEAM** ..... Page 6

**STEP 5 | EXTENSION BEAMS** ..... Page 7

**STEP 6 | MONITOR TILTER** ..... Page 8

**STEP 7 | MONITOR CUPS** ..... Page 9

**STEP 8 | CABLE MANAGEMENT** ..... Page 10

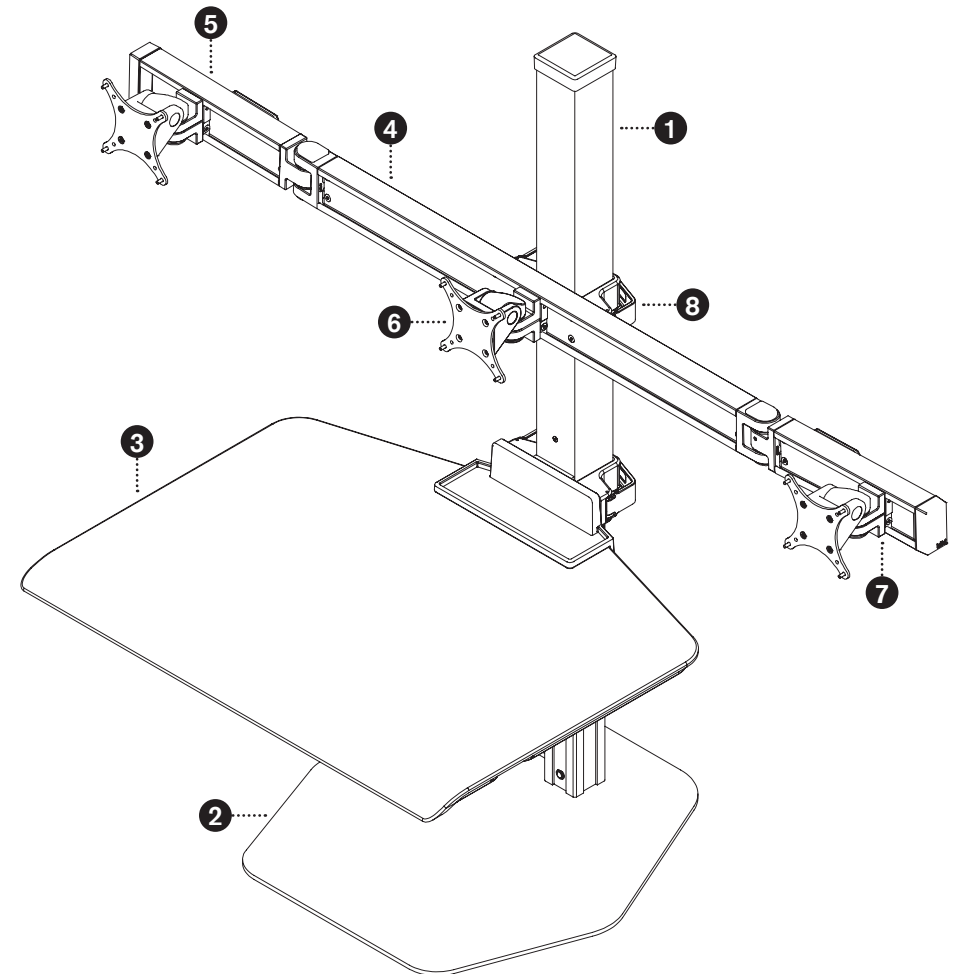

 
 
 
 

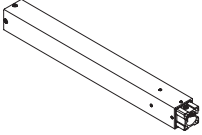 
 
 
 


 
 



 

 



 
 
 

 
 

 
 
**NOTE:** Depending on your Winston Workstation® configuration, you may not receive all the parts shown within this instruction booklet.

**Installation may require two people.**

Depending on your Winston Workstation® configuration, **you may not receive all parts** shown below.

# WNST-3 & WNST-4

 
 
 
 
 
Winston Workstation® Triple & Quad | Parts List

<p>A</p>  <p>Work Surface 411469</p>	<p>H</p>  <p>Column Clamp 111040</p>	<p>O</p>  <p>Extension Beam (10" or 20") 111099-10 or 111099-20</p>	<p>V</p>  <p>HD Monitor Tilter 407747</p>	<p>CC</p>  <p>10-32 x 1/2" FHSCS 711240</p>
<p>B</p>  <p>Column 411470-M</p>	<p>I</p>  <p>Utility Tray 111445</p>	<p>P</p>  <p>End Cap 111159-708</p>	<p>W</p>  <p>M4 x 12mm PhPHS 702096</p>	<p>DD</p>  <p>Column Cable Clip 111203-708</p>
<p>C</p>  <p>Felt Pad 111464</p>	<p>J</p>  <p>Center Beam (10" or 30") 111098-10 or 111098-30</p>	<p>Q</p>  <p>1/8" Allen Wrench 701312</p>	<p>X</p>  <p>QR VESA Adapter 109464</p>	<p>EE</p>  <p>Extension Beam Cable Clip 111252</p>
<p>D</p>  <p>Freestanding Base 111248</p>	<p>K</p>  <p>FHSCS 10-32 x 1-1/2" 711101</p>	<p>R</p>  <p>7/32" Allen Wrench 701127</p>	<p>Y</p>  <p>QR Monitor Tilter 411019</p>	
<p>E</p>  <p>Cable Retainer 111735</p>	<p>L</p>  <p>Column Cap 111275-708</p>	<p>S</p>  <p>10-32 x 3/8" PhPHS 702281</p>	<p>Z</p>  <p>Fine Tune Adjust 8473</p>	
<p>F</p>  <p>3/8-16 x 1" FHSCS 701124</p>	<p>M</p>  <p>Hinge 411491</p>	<p>T</p>  <p>75/100 mm VESA Adapter 105587</p>	<p>AA</p>  <p>Monitor Cup 411351</p>	
<p>G</p>  <p>10-32 x 1" FHSCS 711467</p>	<p>N</p>  <p>10-32 x 9/16" FHSCS 711100</p>	<p>U</p>  <p>Standard Monitor Tilter 405397</p>	<p>BB</p>  <p>Dog Washer 111230-603</p>	

# STEP 1






# COLUMN

**IMPORTANT:** Do not pull excessively on cable – doing so may result in accidental actuation of column.

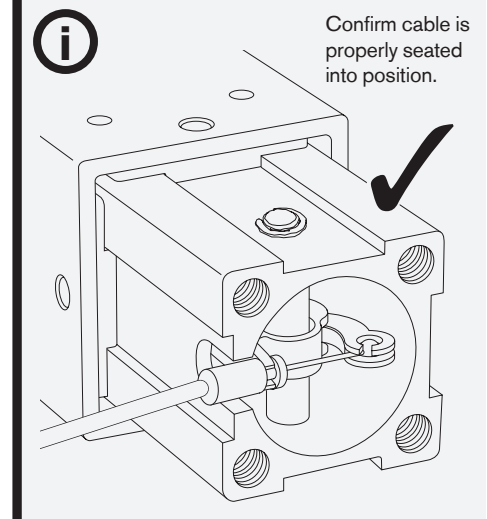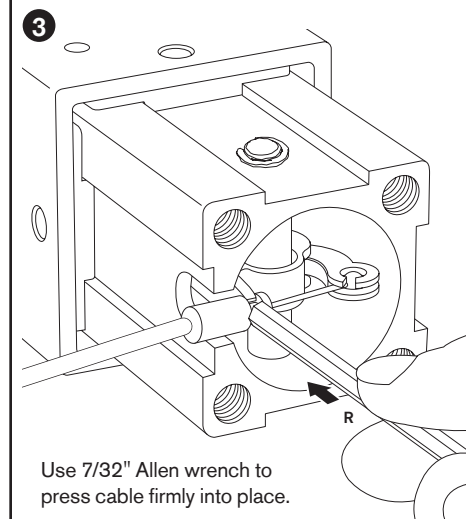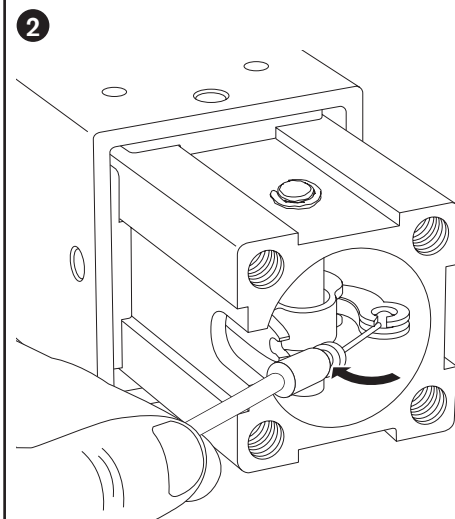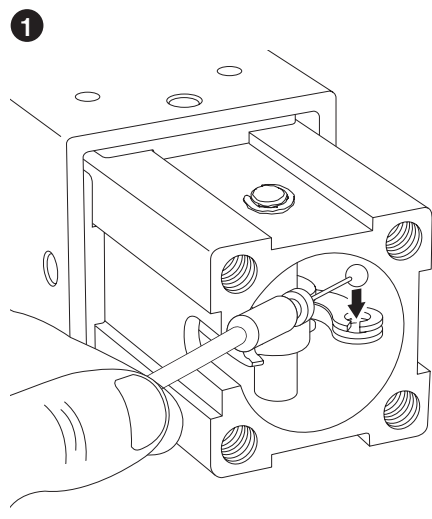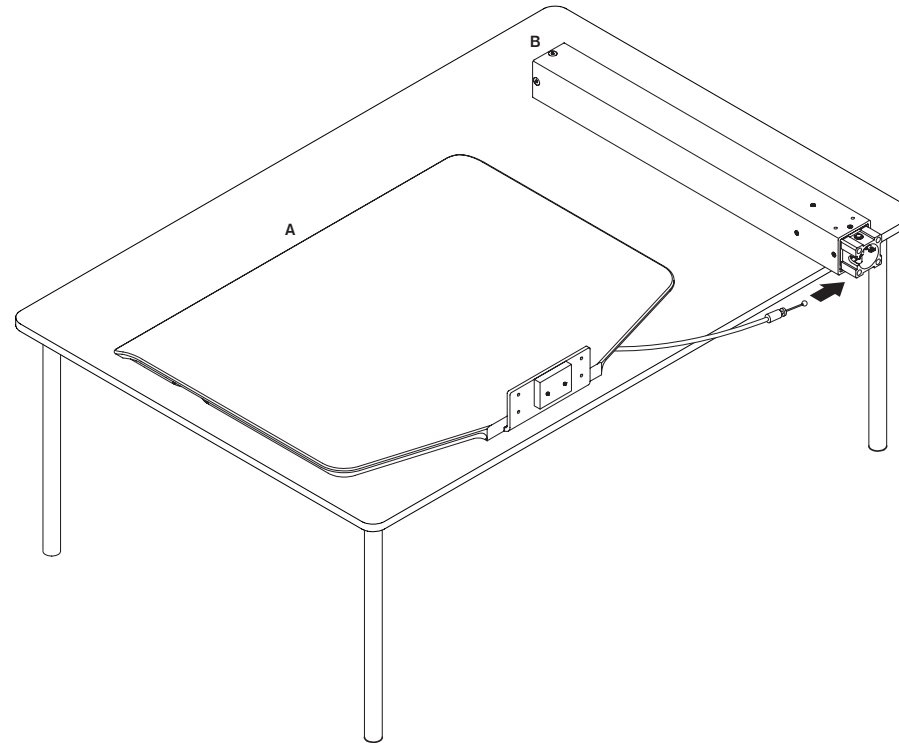

# STEP 2

     
# MOUNT

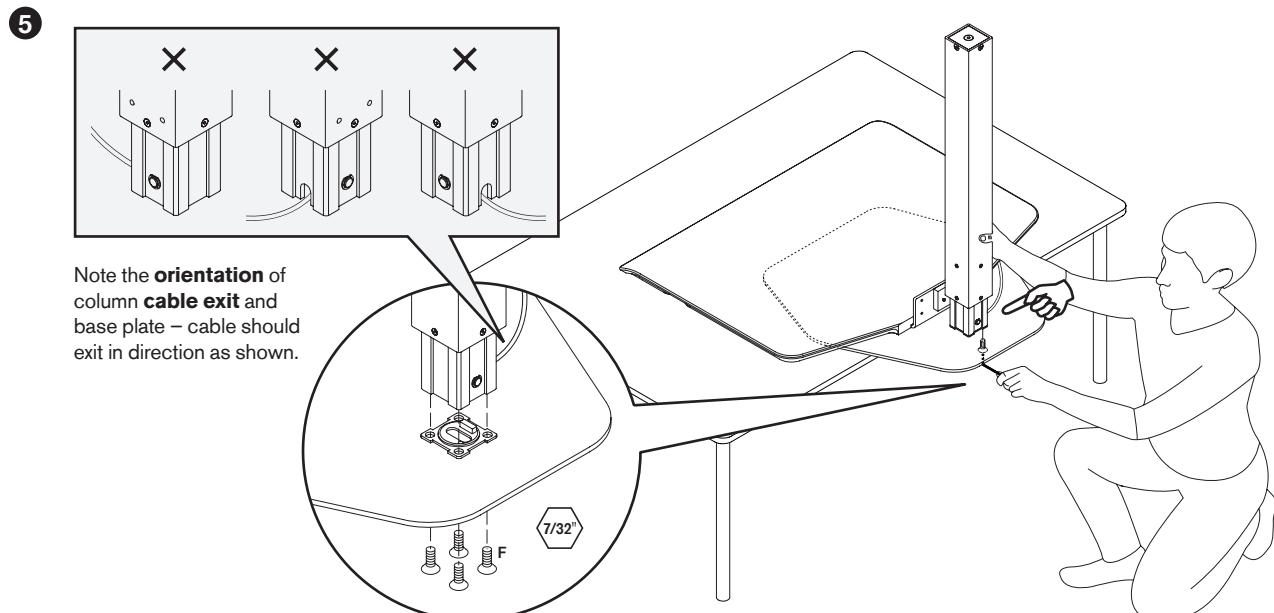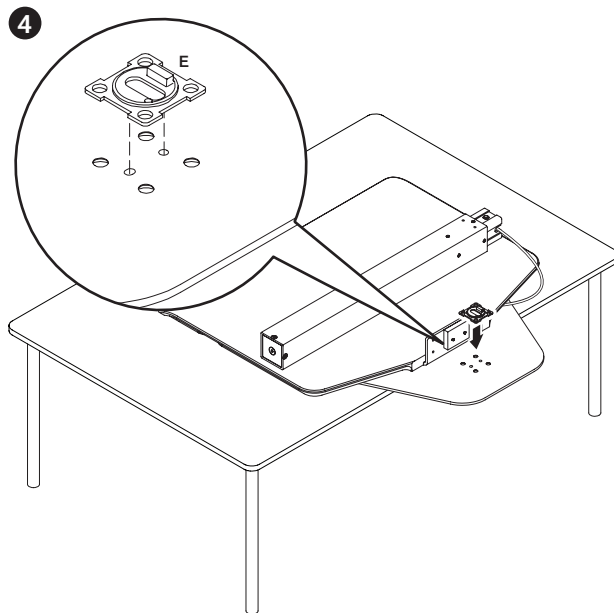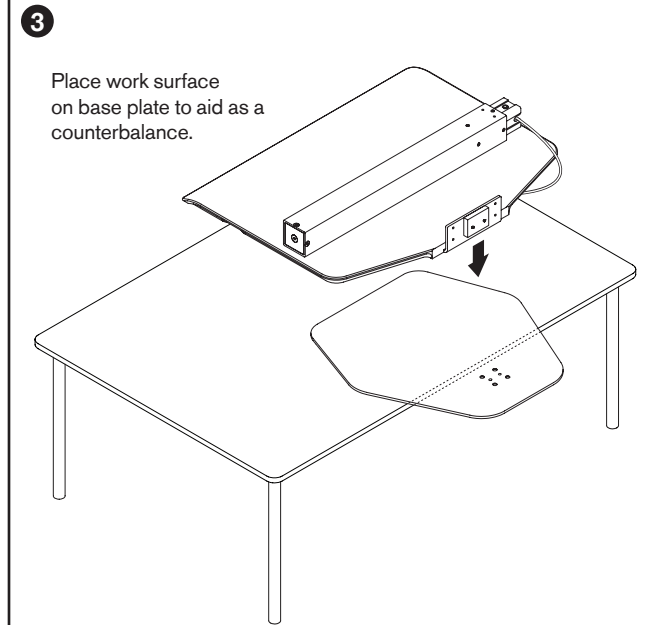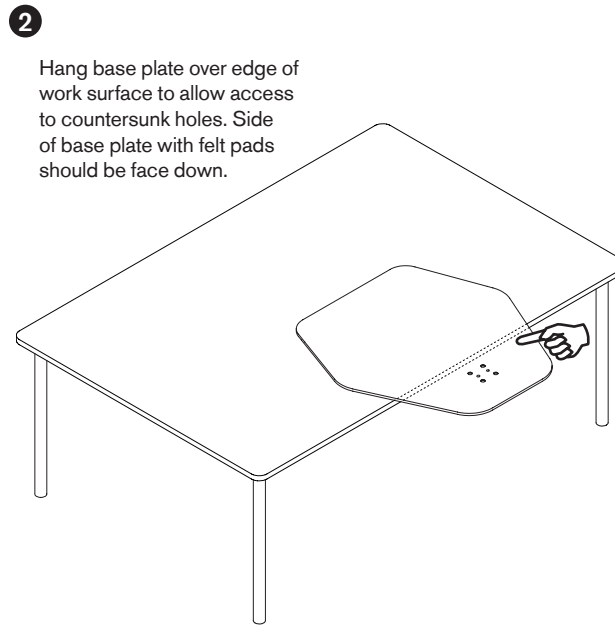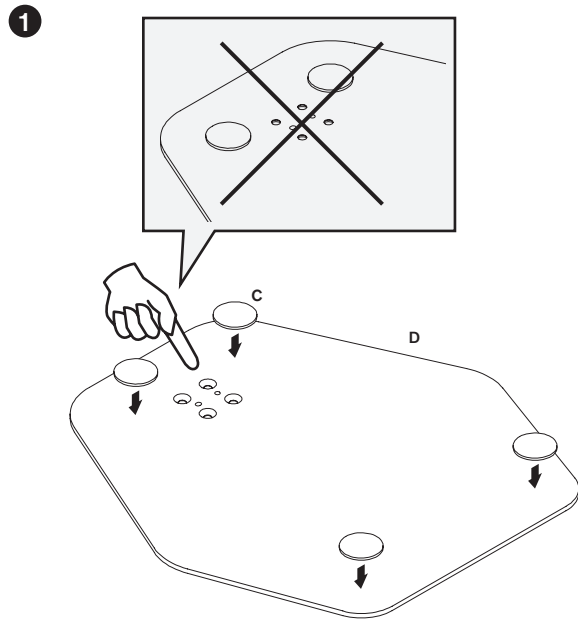

# STEP 3


# WORK SURFACE

 1

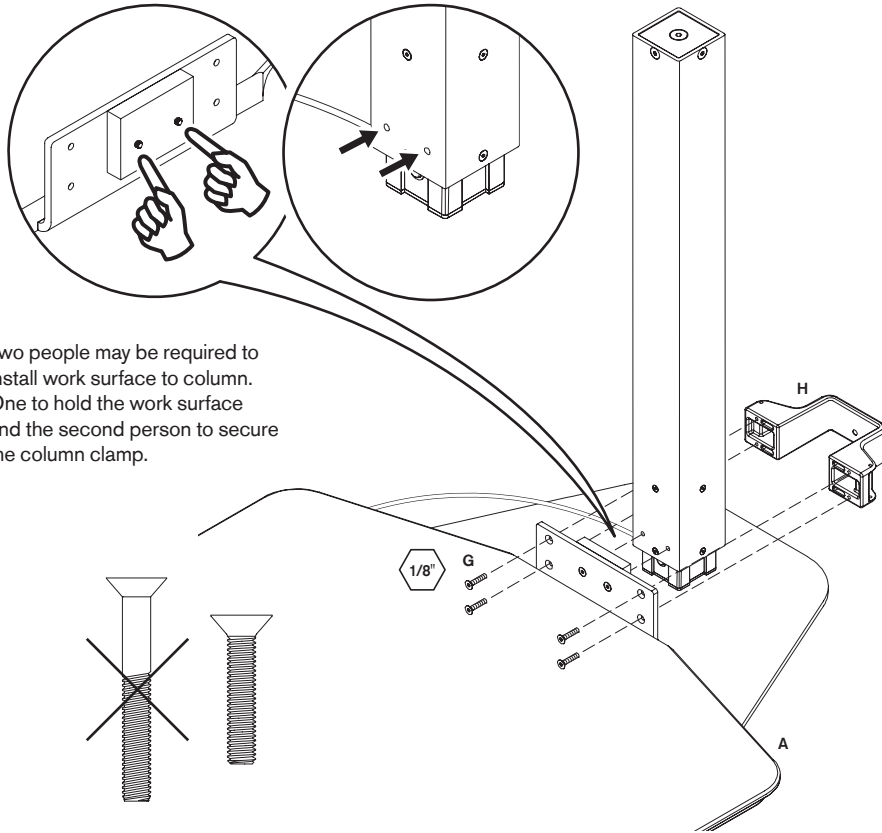

2

 Slide utility tray onto work surface. Utility tray simply rests on top of work surface.




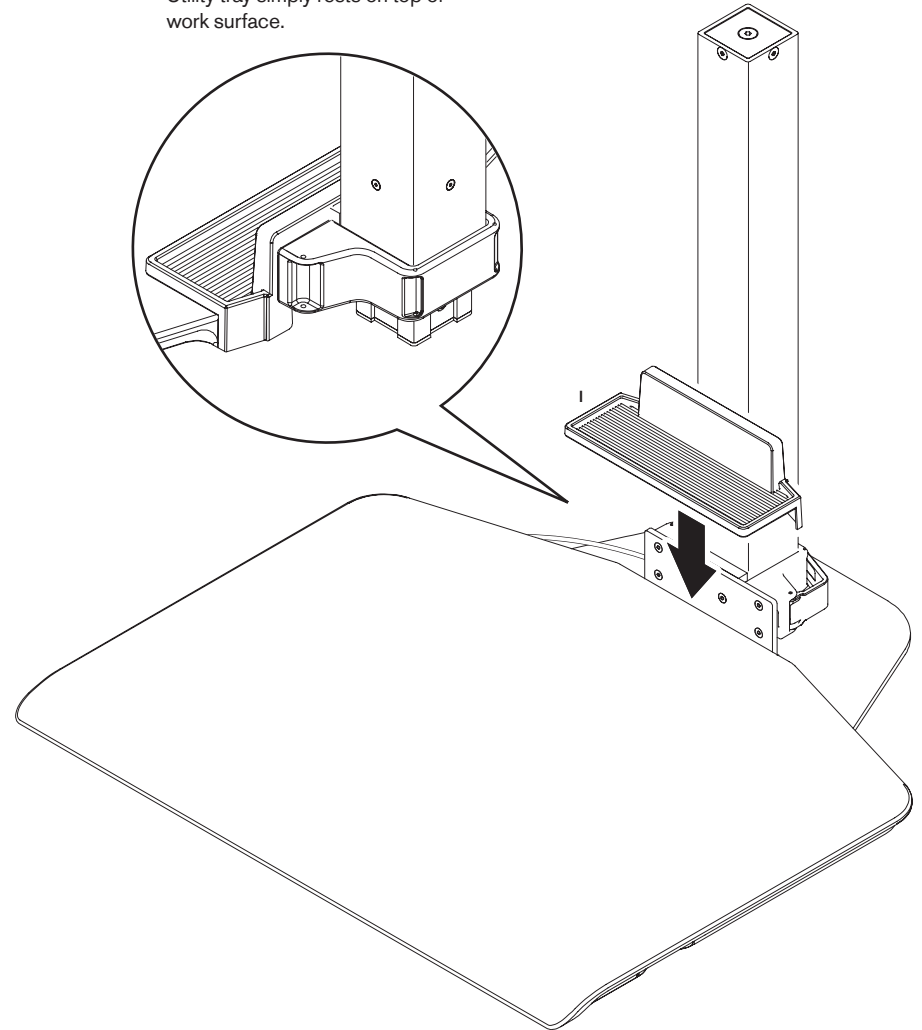


i

**IMPORTANT:** Tighten bolts evenly. Work surface clamp should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.


# STEP 4
    
# CENTER BEAM

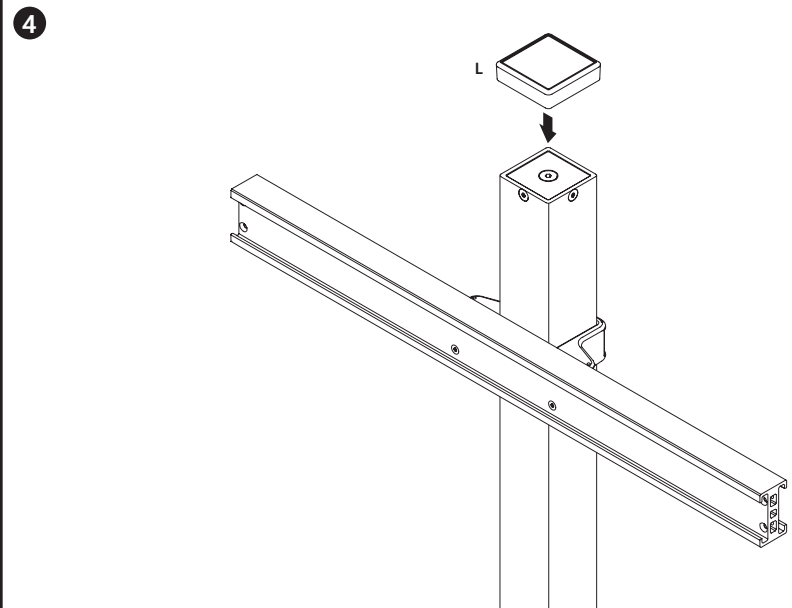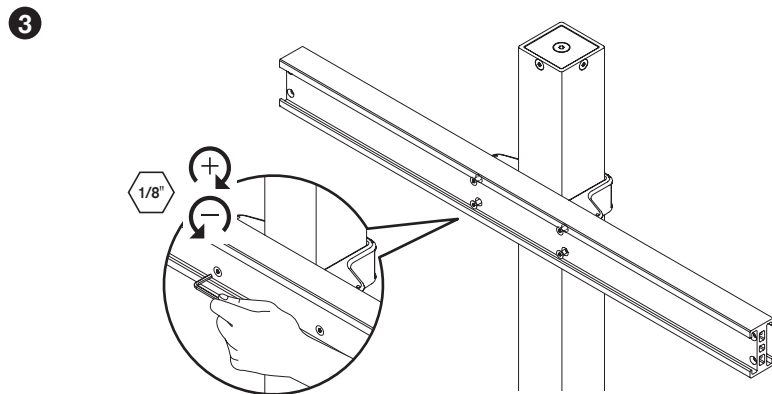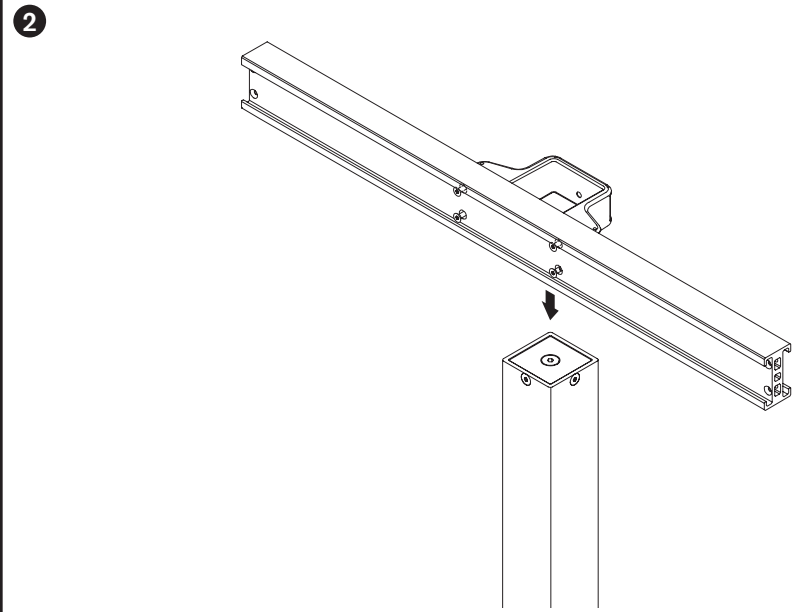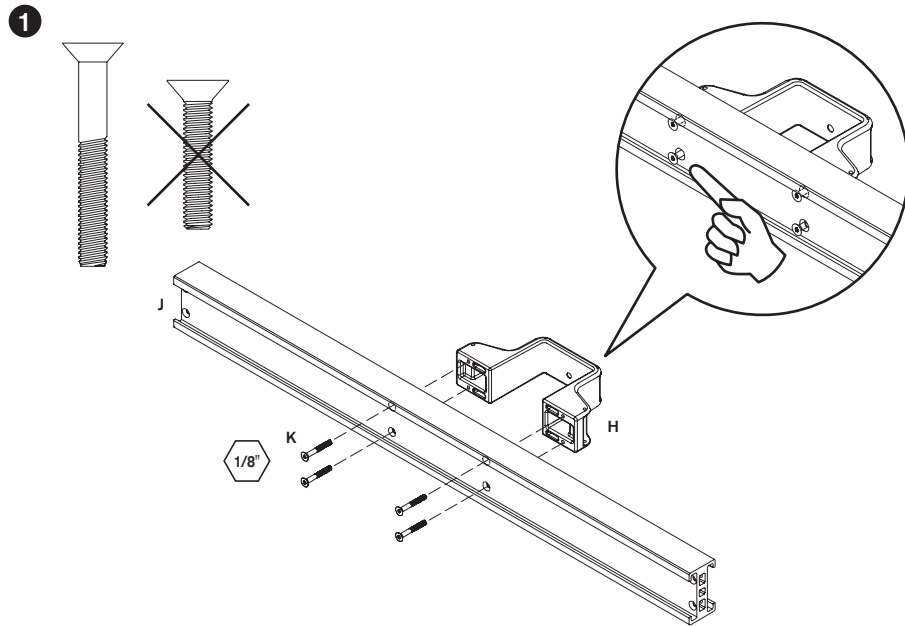





**i**

 **IMPORTANT:** Tighten bolts evenly. The beam should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.

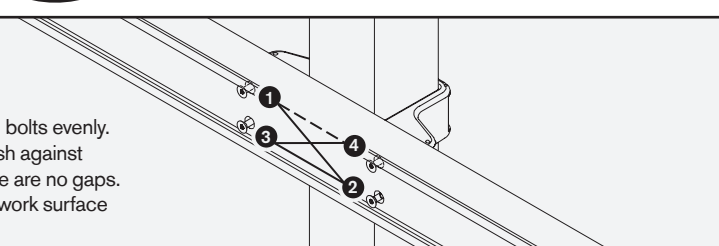

# STEP 5

   
 
# EXTENSION BEAMS

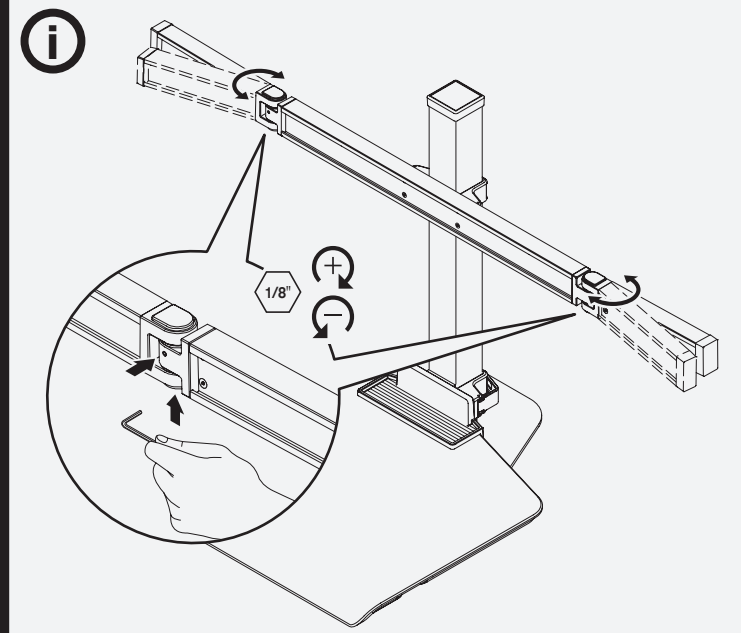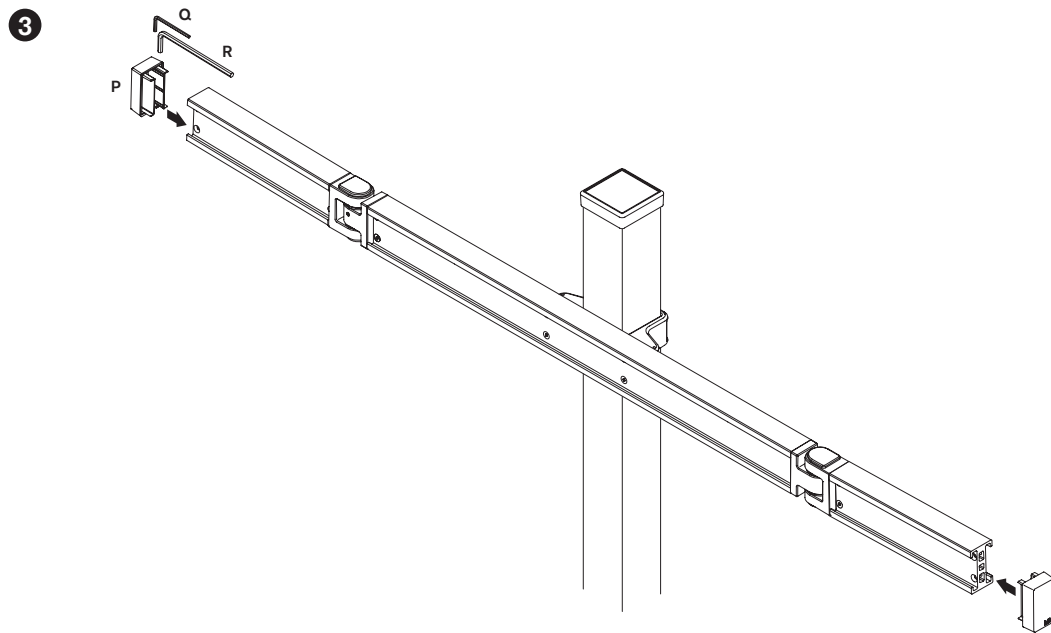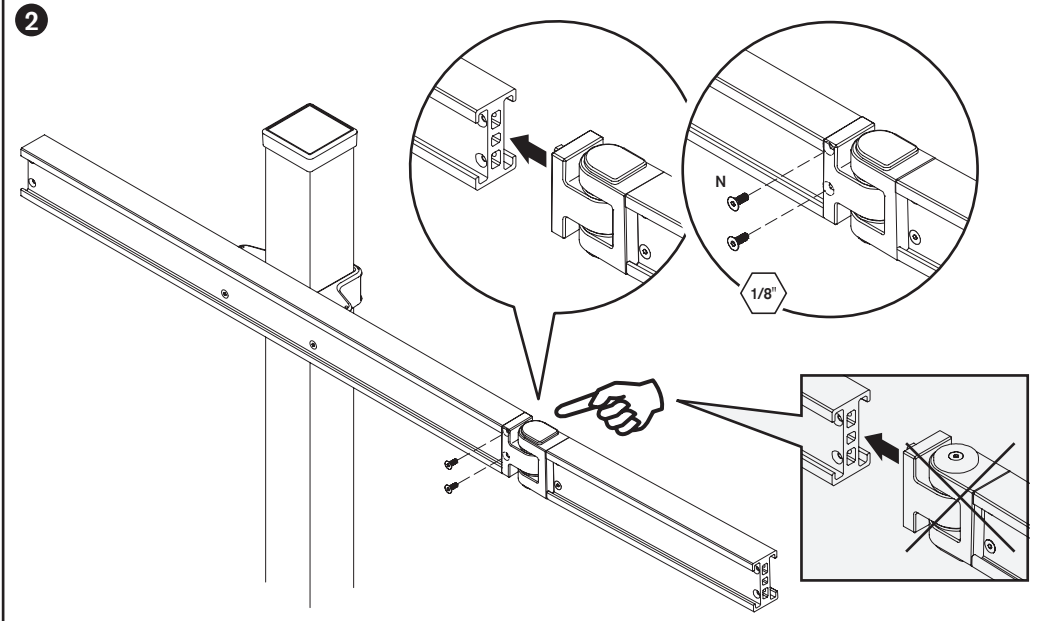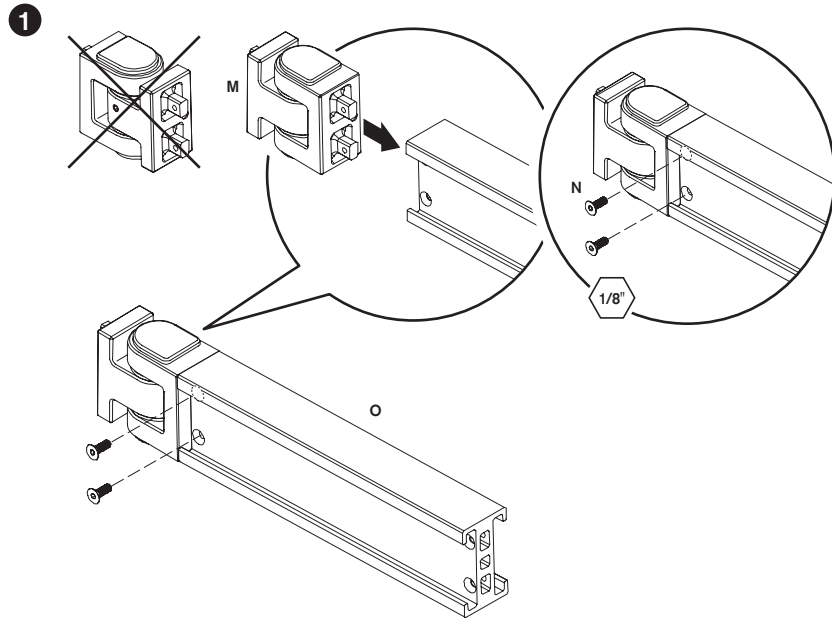



# STEP 6

# MONITOR TILTER



 
 
## STANDARD TILTER & SPRING TILTER

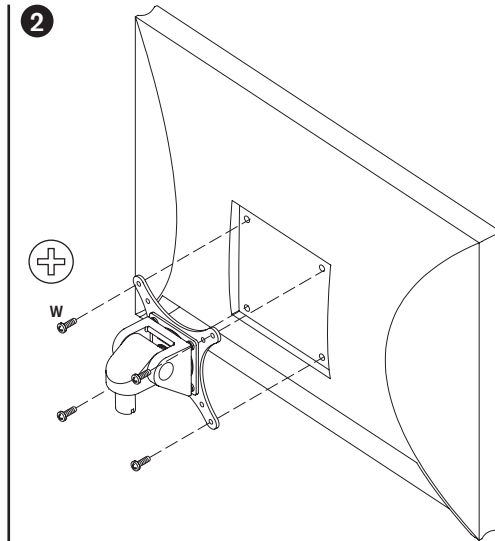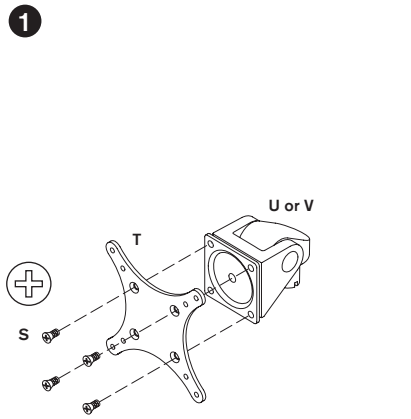

## QUICK RELEASE TILTER

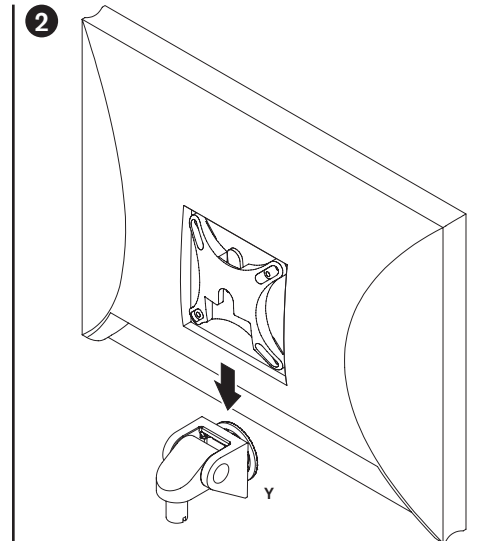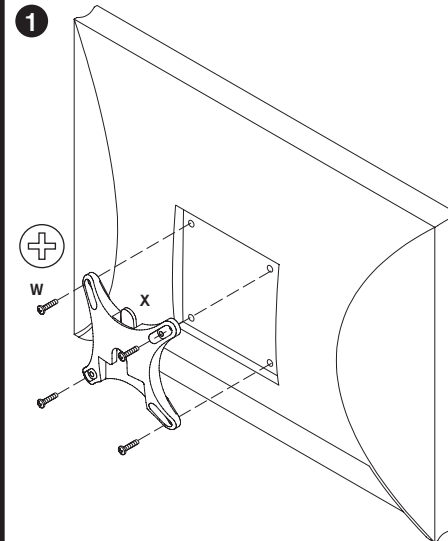  

## FINE TUNE HEIGHT ADJUST TILTER

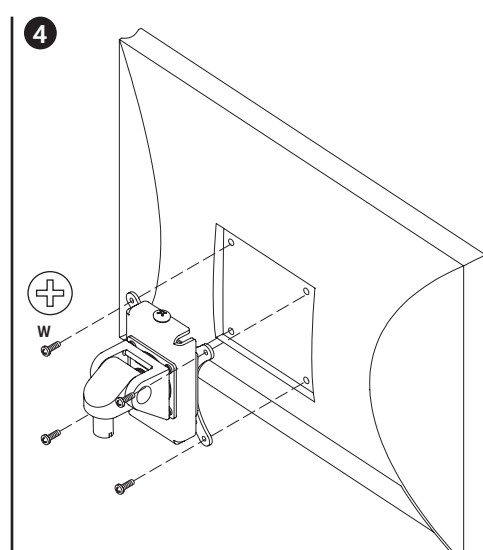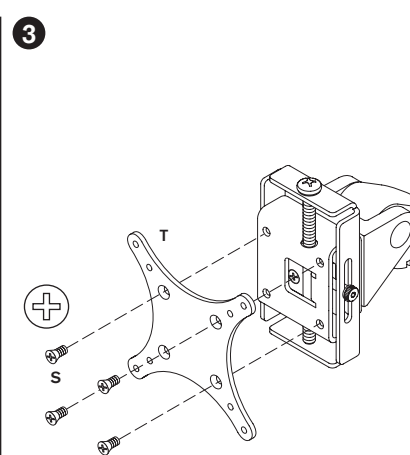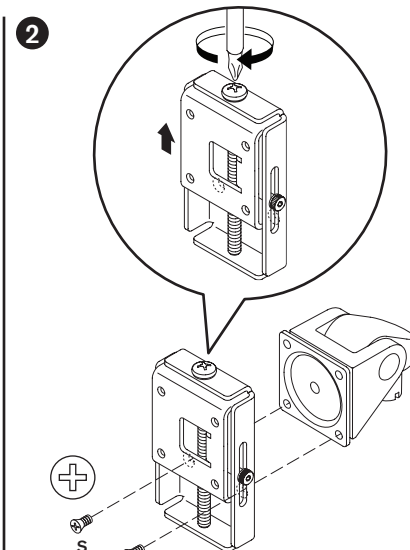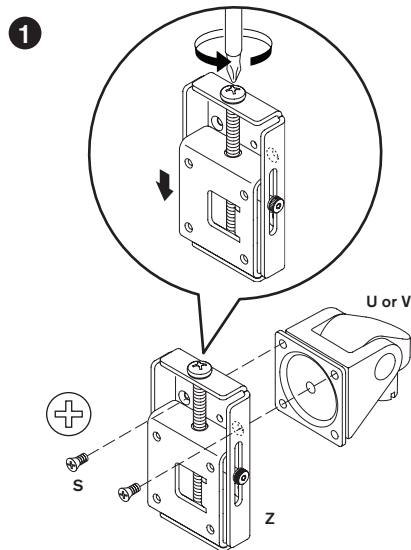    





# STEP 7

# MONITOR CUPS

 1

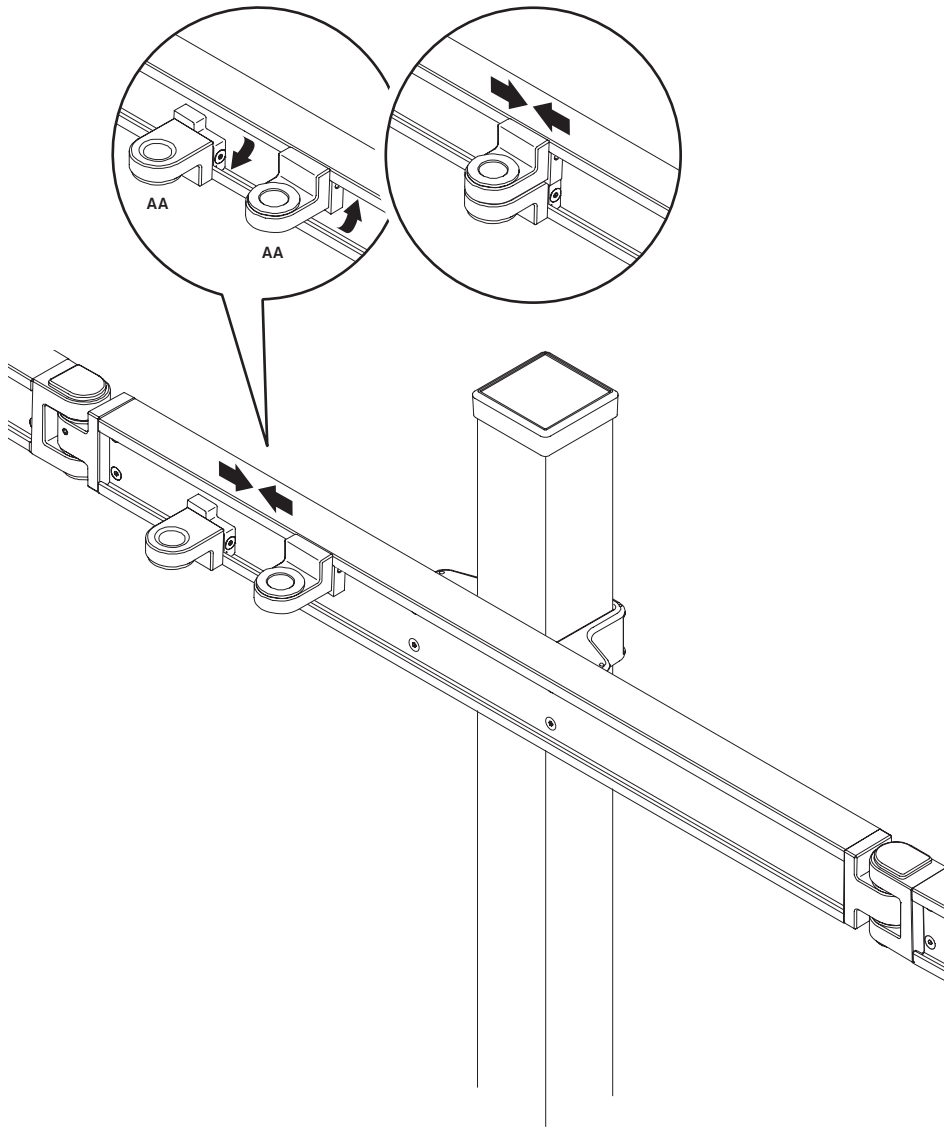


2

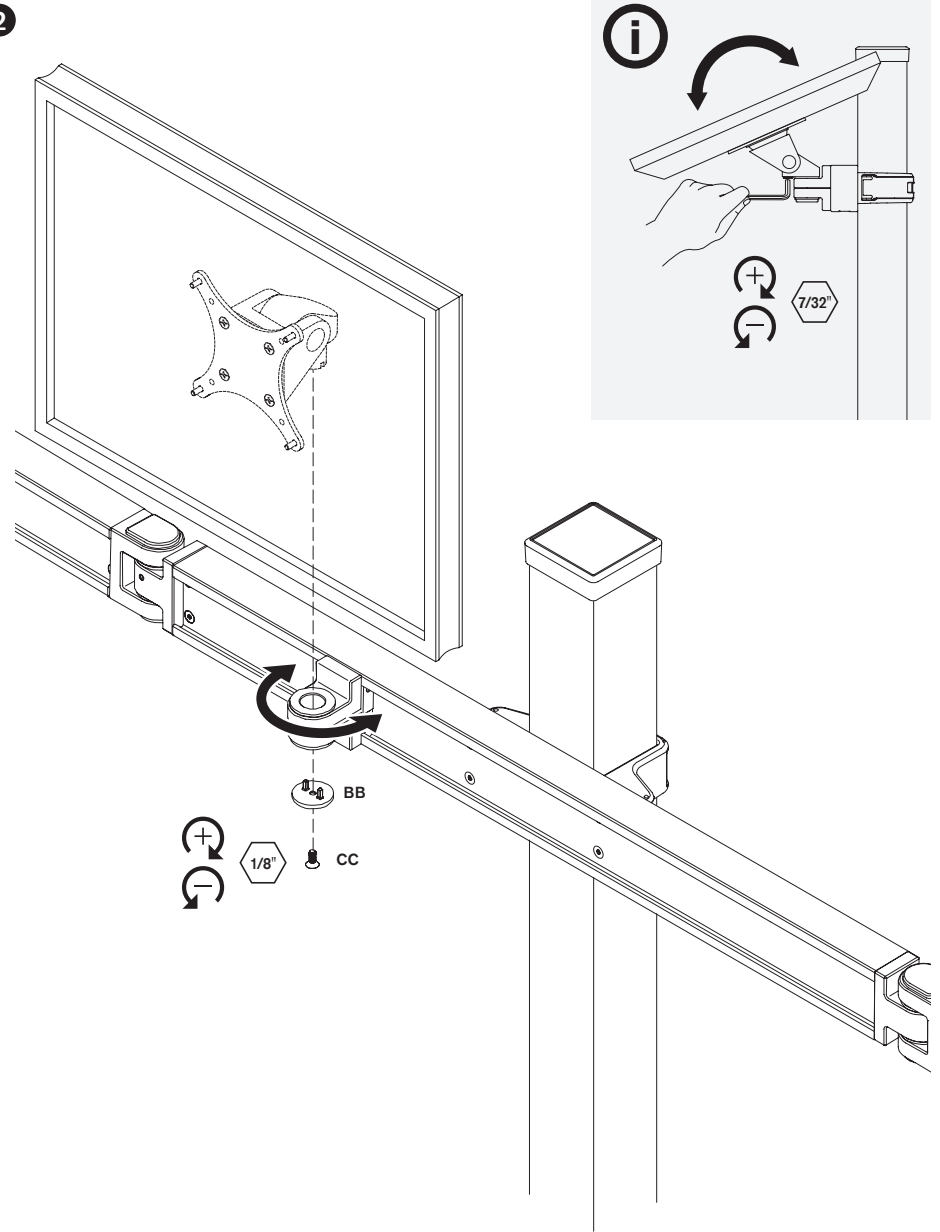 


# STEP 8

# CABLE MANAGEMENT

 
1

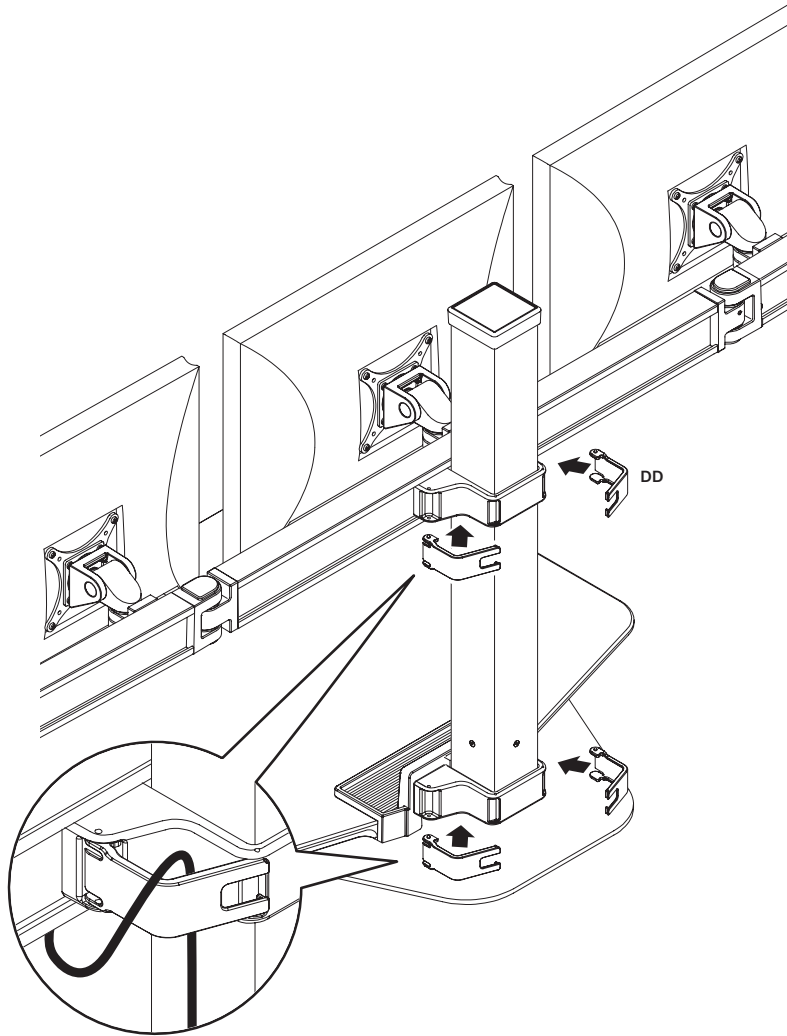

2

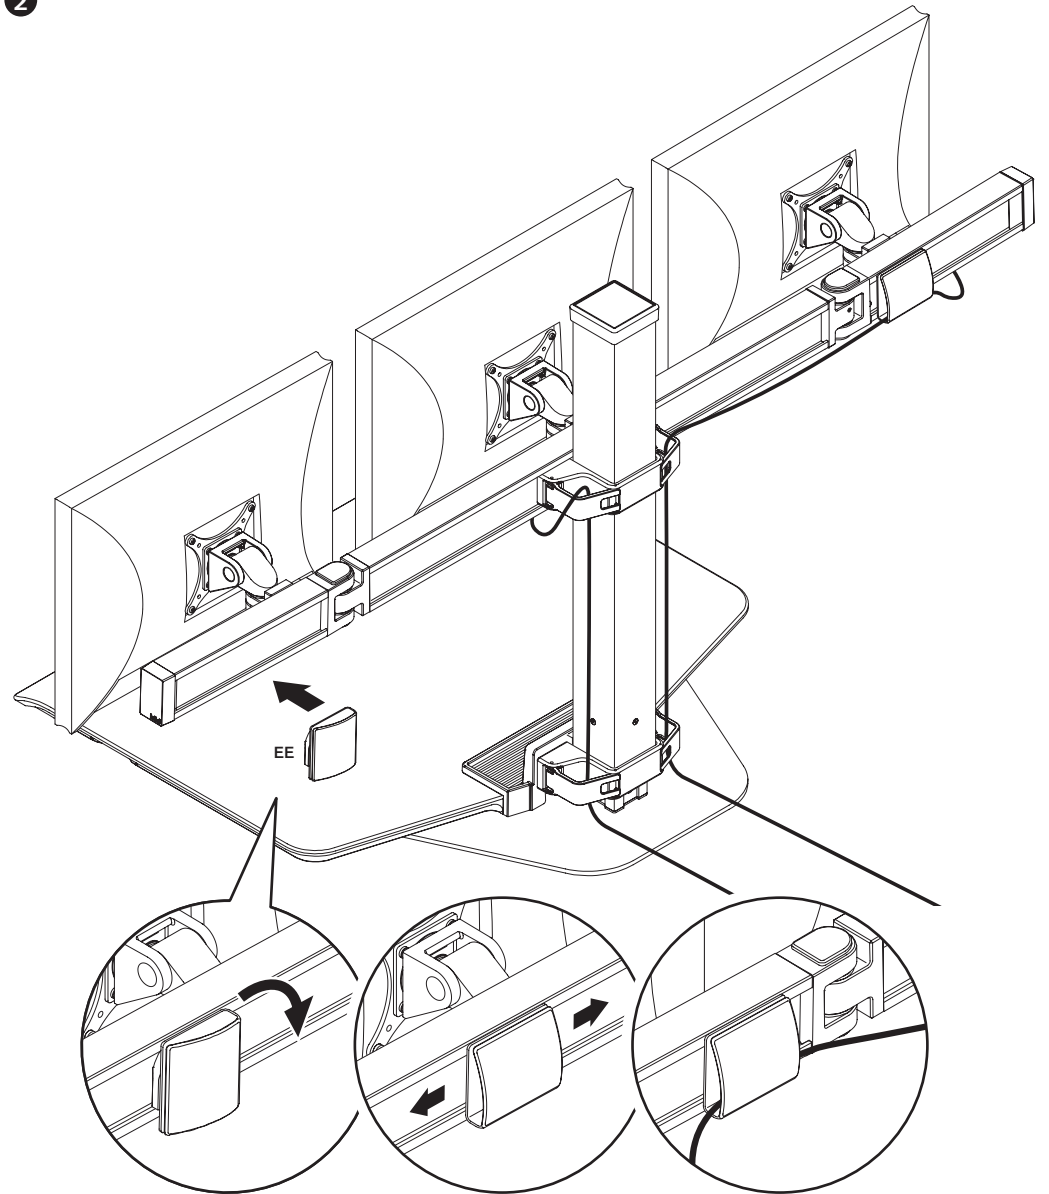 

# HEIGHT ADJUSTMENT

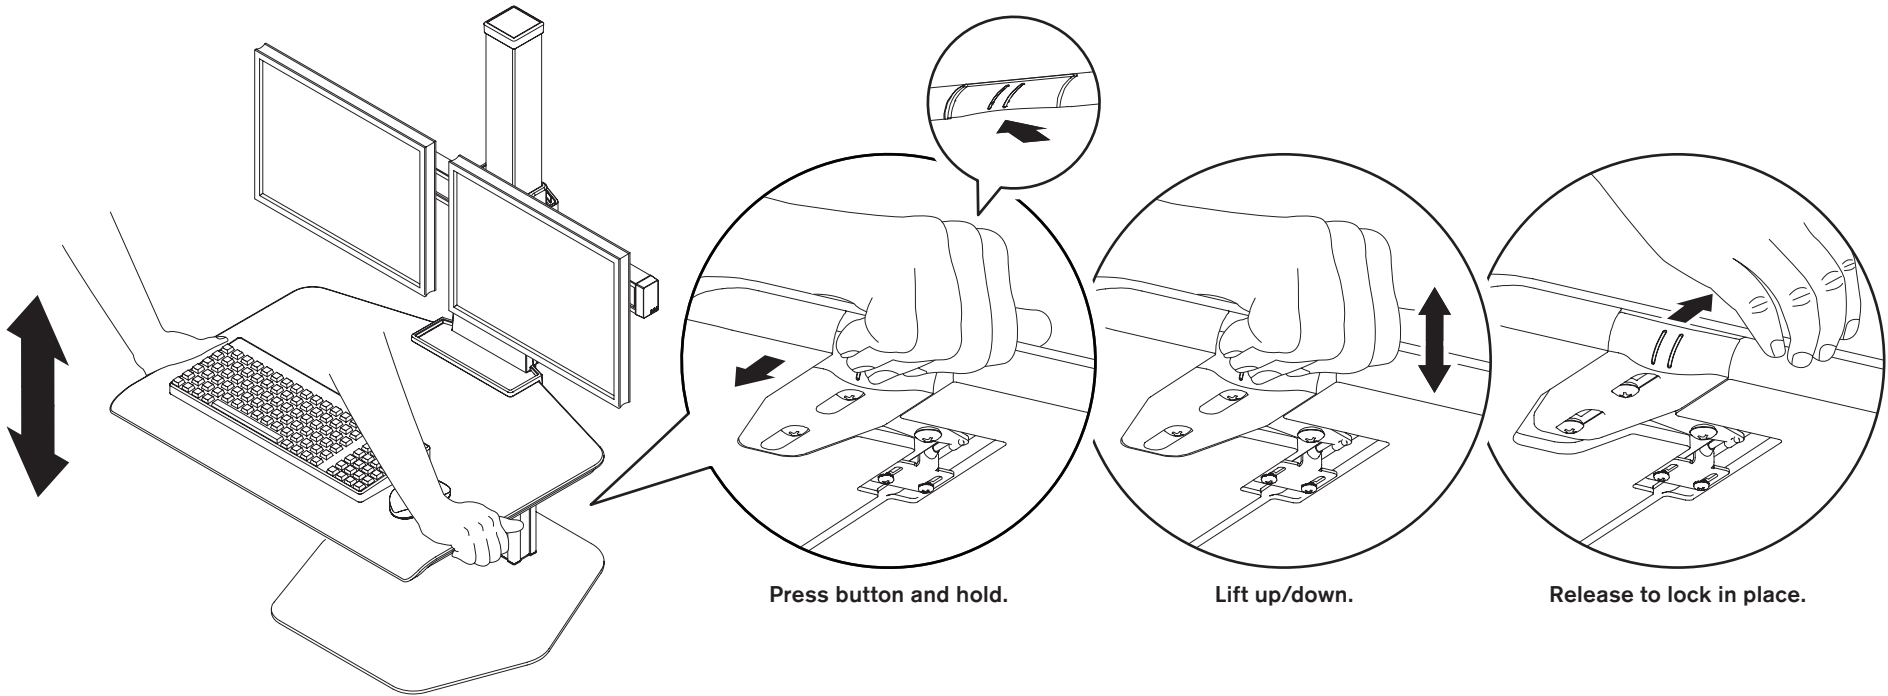 

## **i** Is your height adjust button not working? If so, make the adjustments below.

- 1 Slide workstation so that the work surface hangs over desk edge to allow access to underneath the work surface.
- 2 Loosen the two screws as shown.
- 3 Slide bracket in the direction shown and tighten screws.
- 4 Test height adjust button – readjust by repeating the steps above as necessary.

