 


STEP 1 COLUMN	Page 3
STEP 2 MOUNT	Page 4
STEP 3 WORK SURFACE	Page 5
STEP 4 CENTER BEAM	Page 6
STEP 5 EXTENSION BEAMS	Page 7
STEP 6 MONITOR TILTER	Page 8
STEP 7 MONITOR CUPS	Page 9
STEP 8 CABLE MANAGEMENT	Page 10

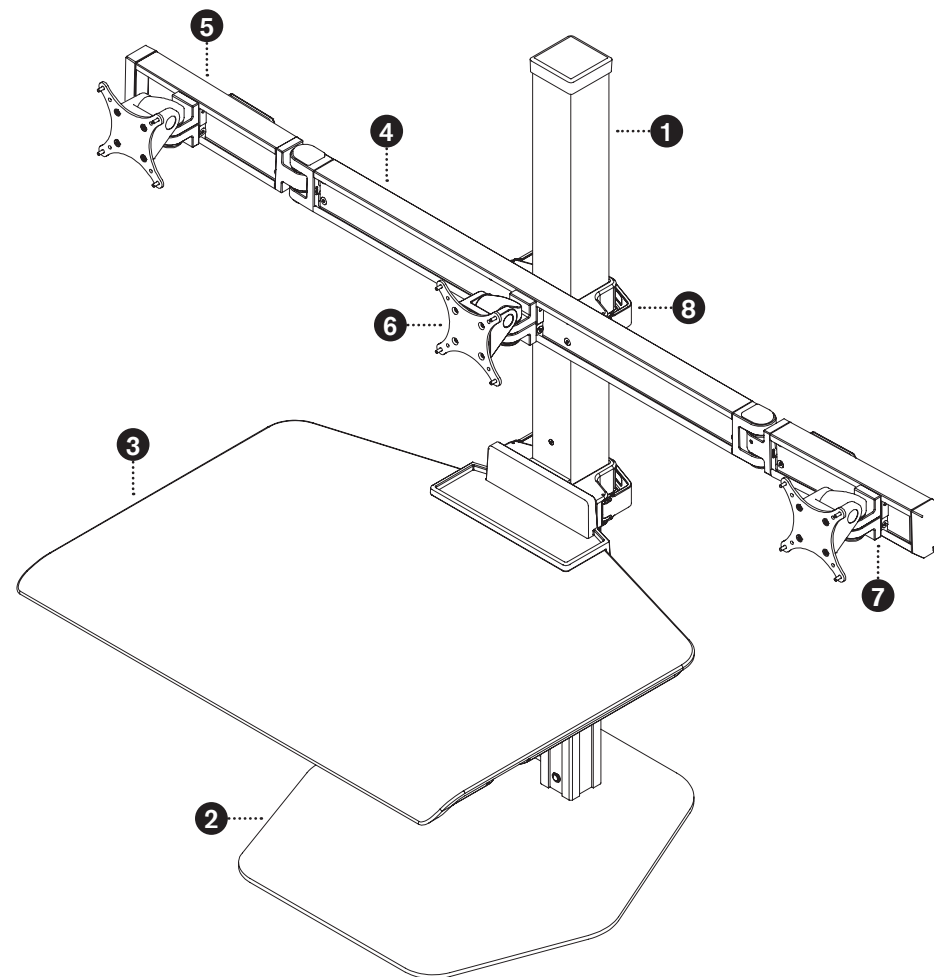



 


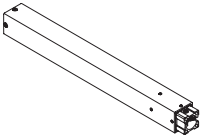
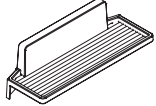

 










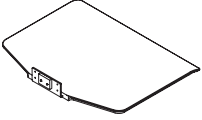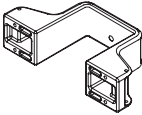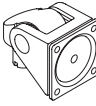


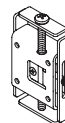
 
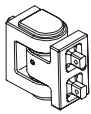

 


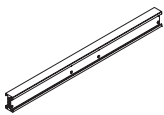

NOTE: Depending on your Winston Workstation® configuration, you may not receive all the parts shown within this instruction booklet.

Installation may require two people.

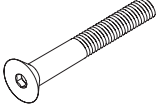Depending on your Winston Workstation® configuration,
you may not receive all parts shown below.

WNST-3 & WNST-4






Winston Workstation® Triple & Quad | Parts List
 
<p>A</p>  <p>Work Surface 411469</p>	<p>H</p>  <p>Column Clamp 111040</p>	<p>O</p>  <p>Extension Beam (10" or 20") 111099-10 or 111099-20</p>	<p>V</p>  <p>HD Monitor Tilter 407747</p>	<p>CC</p>  <p>10-32 x 1/2" FHSCS 711240</p>
<p>B</p>  <p>Column 411470-M</p>	<p>I</p>  <p>Utility Tray 111445</p>	<p>P</p>  <p>End Cap 111159-708</p>	<p>W</p>  <p>M4 x 12mm PhPHS 702096</p>	<p>DD</p>  <p>Column Cable Clip 111203-708</p>
<p>C</p>  <p>Felt Pad 111464</p>	<p>J</p>  <p>Center Beam (10" or 30") 111098-10 or 111098-30</p>	<p>Q</p>  <p>1/8" Allen Wrench 701312</p>	<p>X</p>  <p>QR VESA Adapter 109464</p>	<p>EE</p>  <p>Extension Beam Cable Clip 111252</p>
<p>D</p>  <p>Freestanding Base 111248</p>	<p>K</p>  <p>FHSCS 10-32 x 1-1/2" 711101</p>	<p>R</p>  <p>7/32" Allen Wrench 701127</p>	<p>Y</p>  <p>QR Monitor Tilter 411019</p>	
<p>E</p>  <p>Cable Retainer 111735</p>	<p>L</p>  <p>Column Cap 111275-708</p>	<p>S</p>  <p>10-32 x 3/8" PhPHS 702281</p>	<p>Z</p>  <p>Fine Tune Adjust 8473</p>	
<p>F</p>  <p>3/8-16 x 1" FHSCS 701124</p>	<p>M</p>  <p>Hinge 411491</p>	<p>T</p>  <p>75/100 mm VESA Adapter 105587</p>	<p>AA</p>  <p>Monitor Cup 411351</p>	
<p>G</p>  <p>10-32 x 1" FHSCS 711467</p>	<p>N</p>  <p>10-32 x 9/16" FHSCS 711100</p>	<p>U</p>  <p>Standard Monitor Tilter 405397</p>	<p>BB</p>  <p>Dog Washer 111230-603</p>	

STEP 1

COLUMN

     
IMPORTANT: Do not pull excessively on cable – doing so may result in accidental actuation of column.

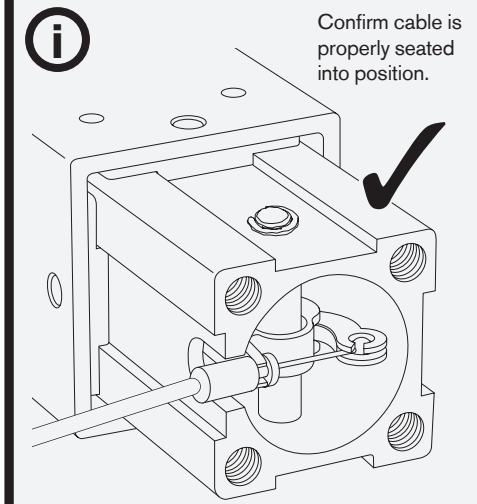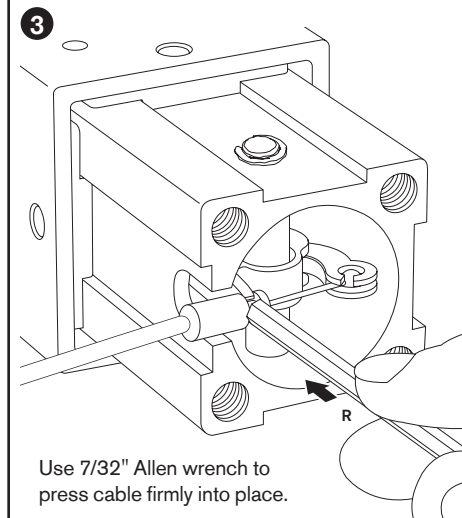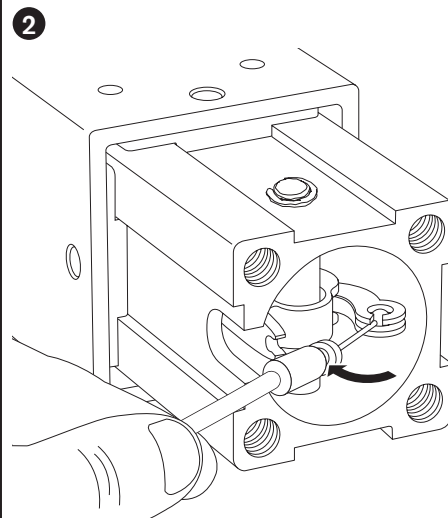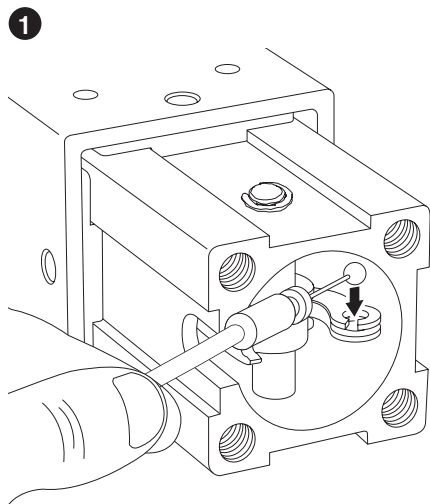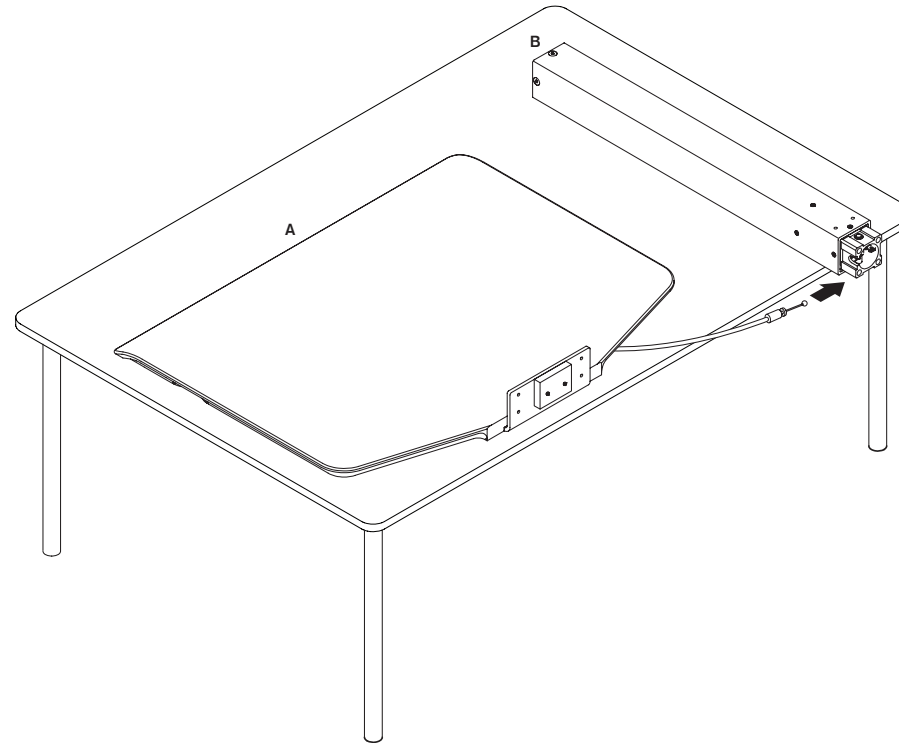

STEP 2


MOUNT

 1

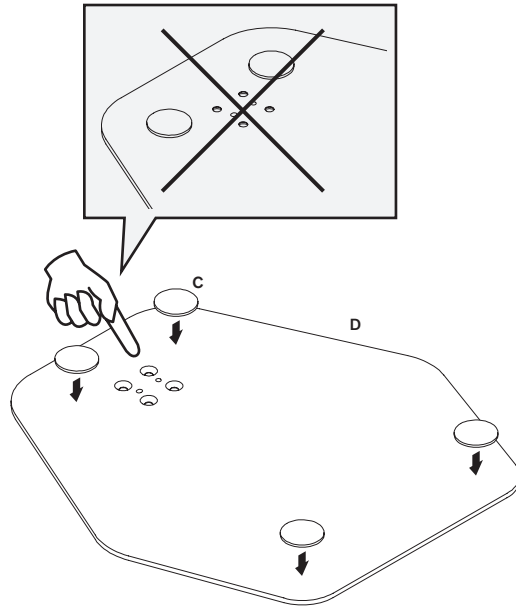


2

 Hang base plate over edge of work surface to allow access to countersunk holes. Side of base plate with felt pads should be face down.

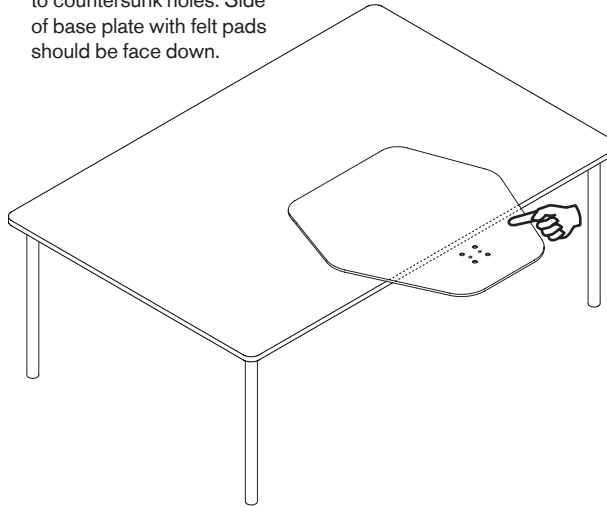


3

 
Place work surface on base plate to aid as a counterbalance.

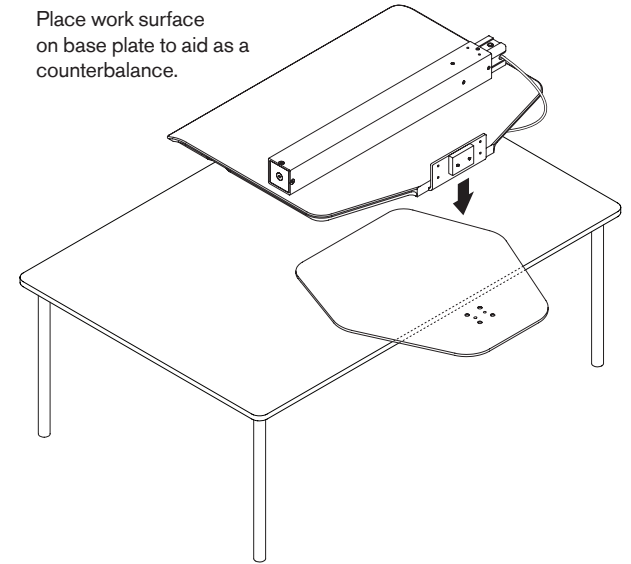


4

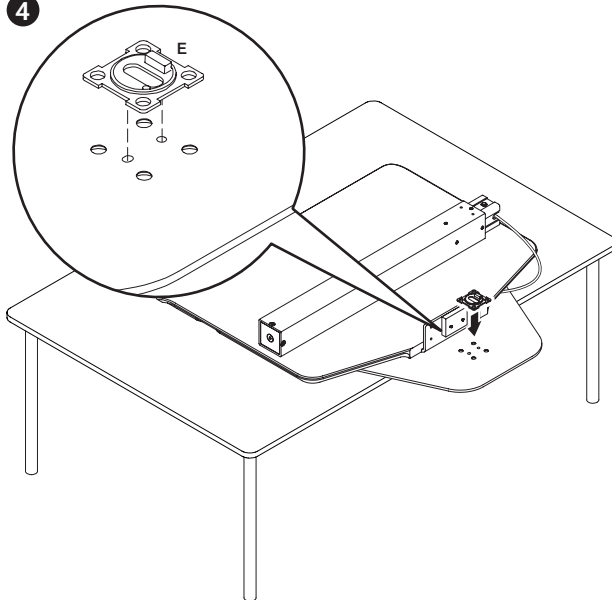 

5

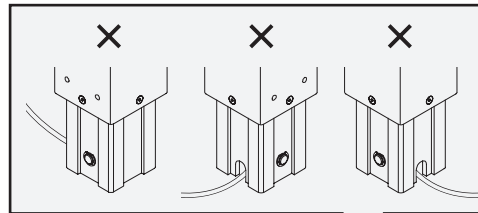 

 
Note the **orientation** of column **cable exit** and base plate – cable should exit in direction as shown.

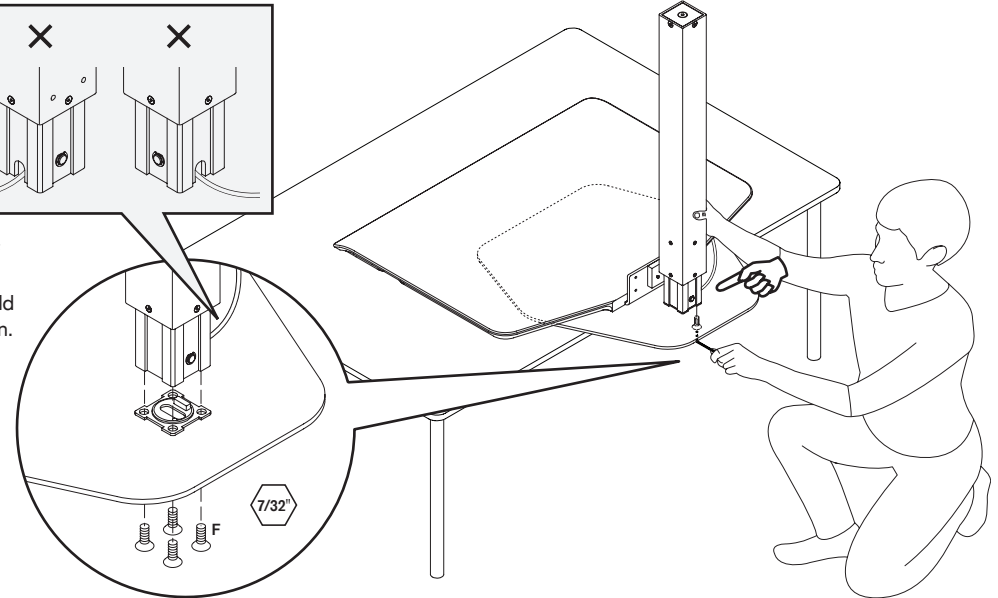

STEP 3


WORK SURFACE

 1

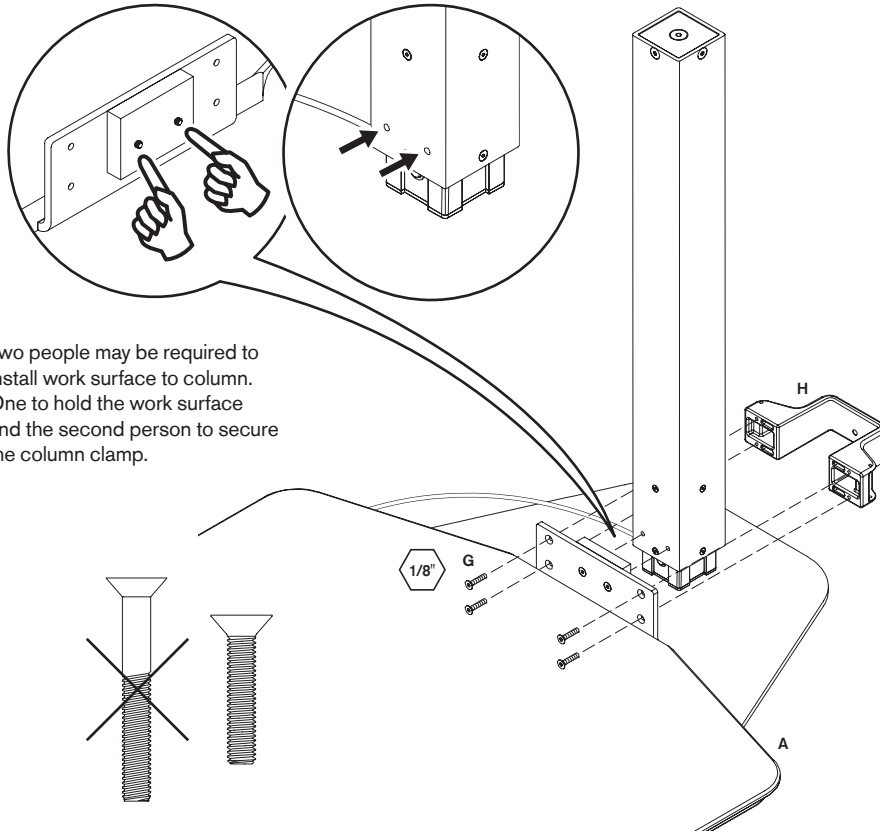


2

 Slide utility tray onto work surface.
Utility tray simply rests on top of work surface.

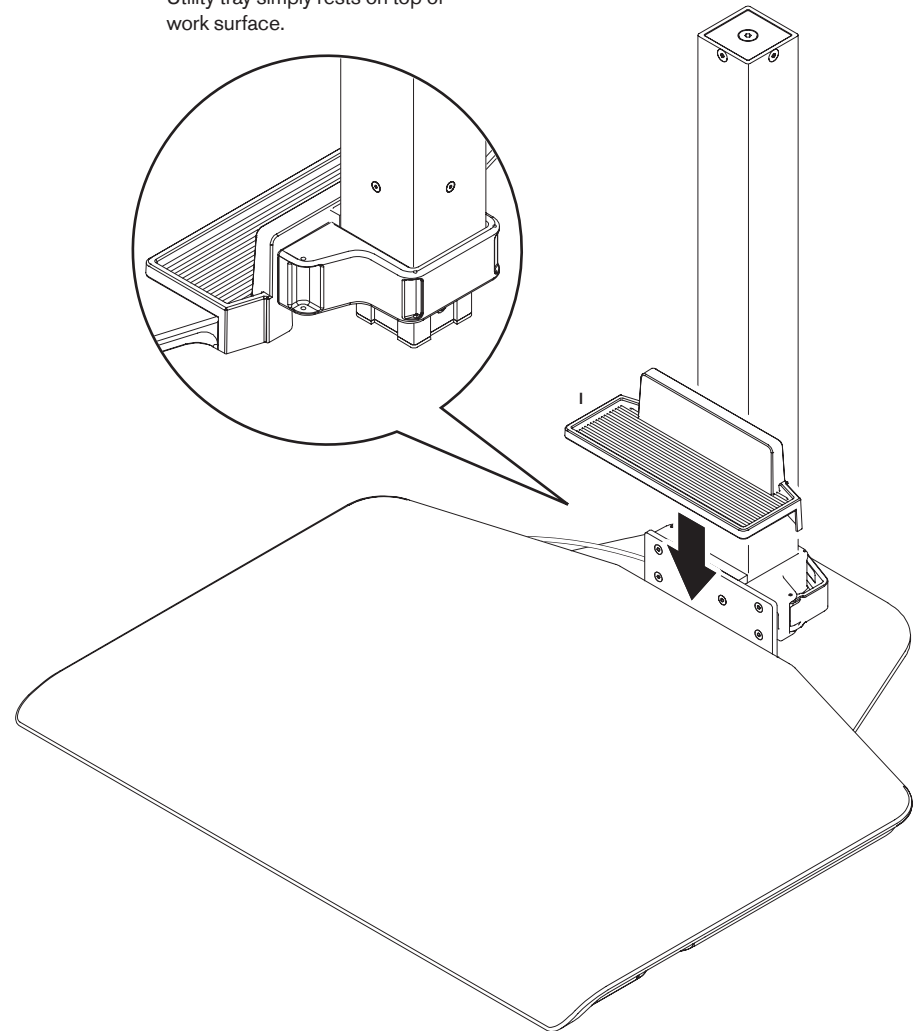

 
IMPORTANT: Tighten bolts evenly. Work surface clamp should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.

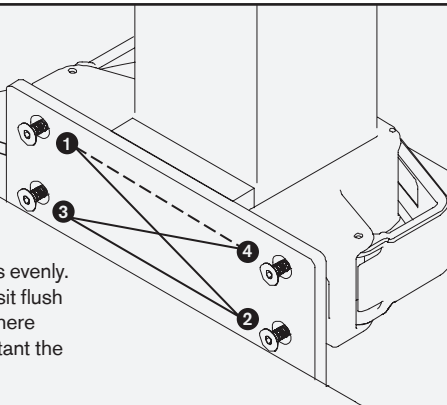


STEP 4

CENTER BEAM

 
1

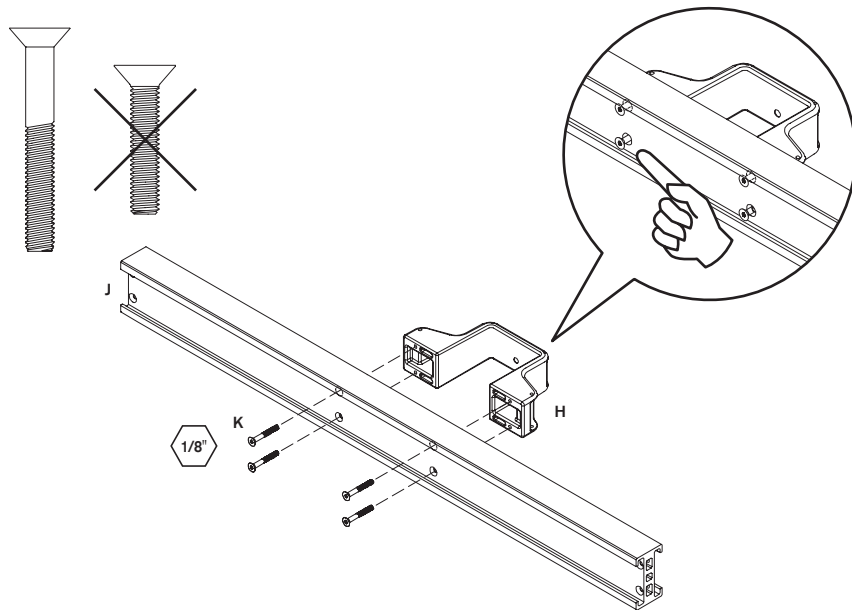


2

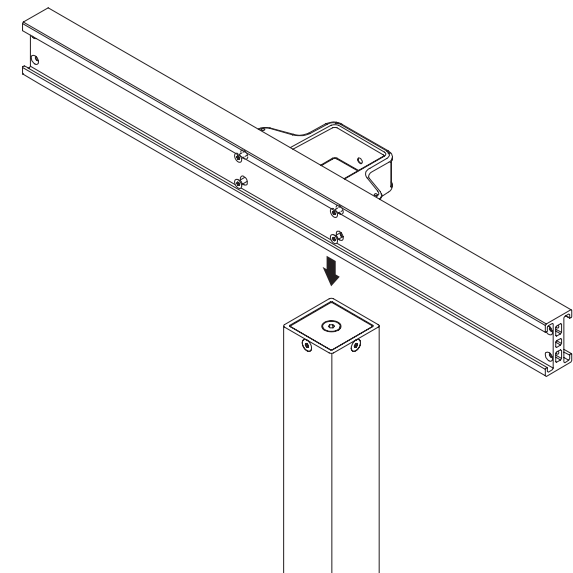 


3

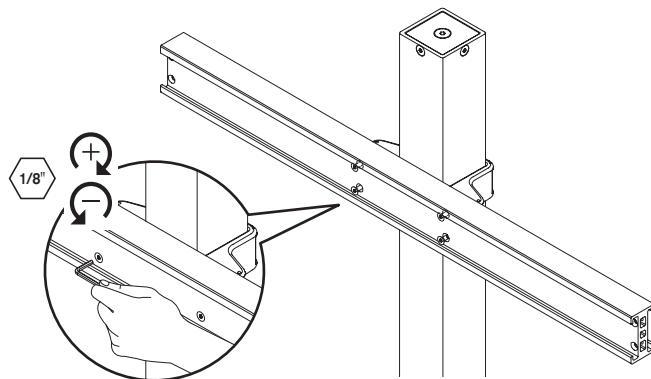 

4

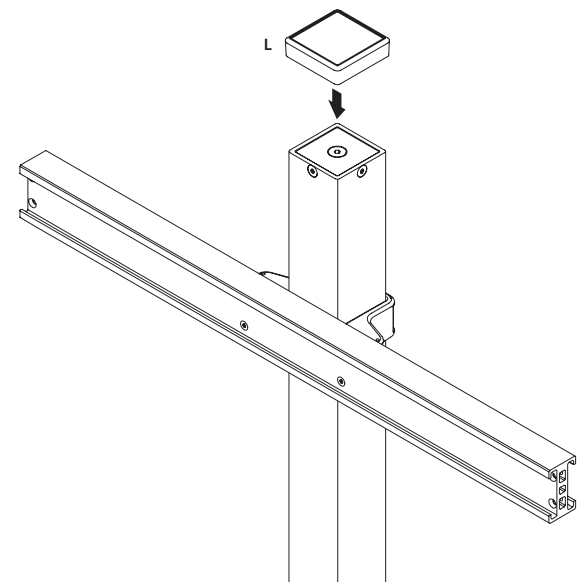 


 IMPORTANT: Tighten bolts evenly. The beam should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.

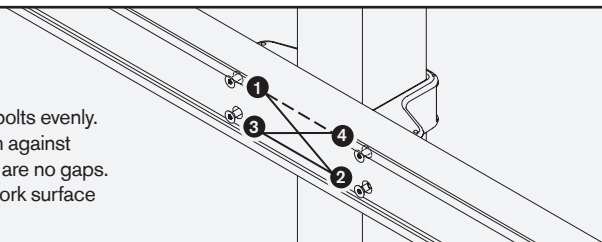

STEP 5

 
EXTENSION BEAMS

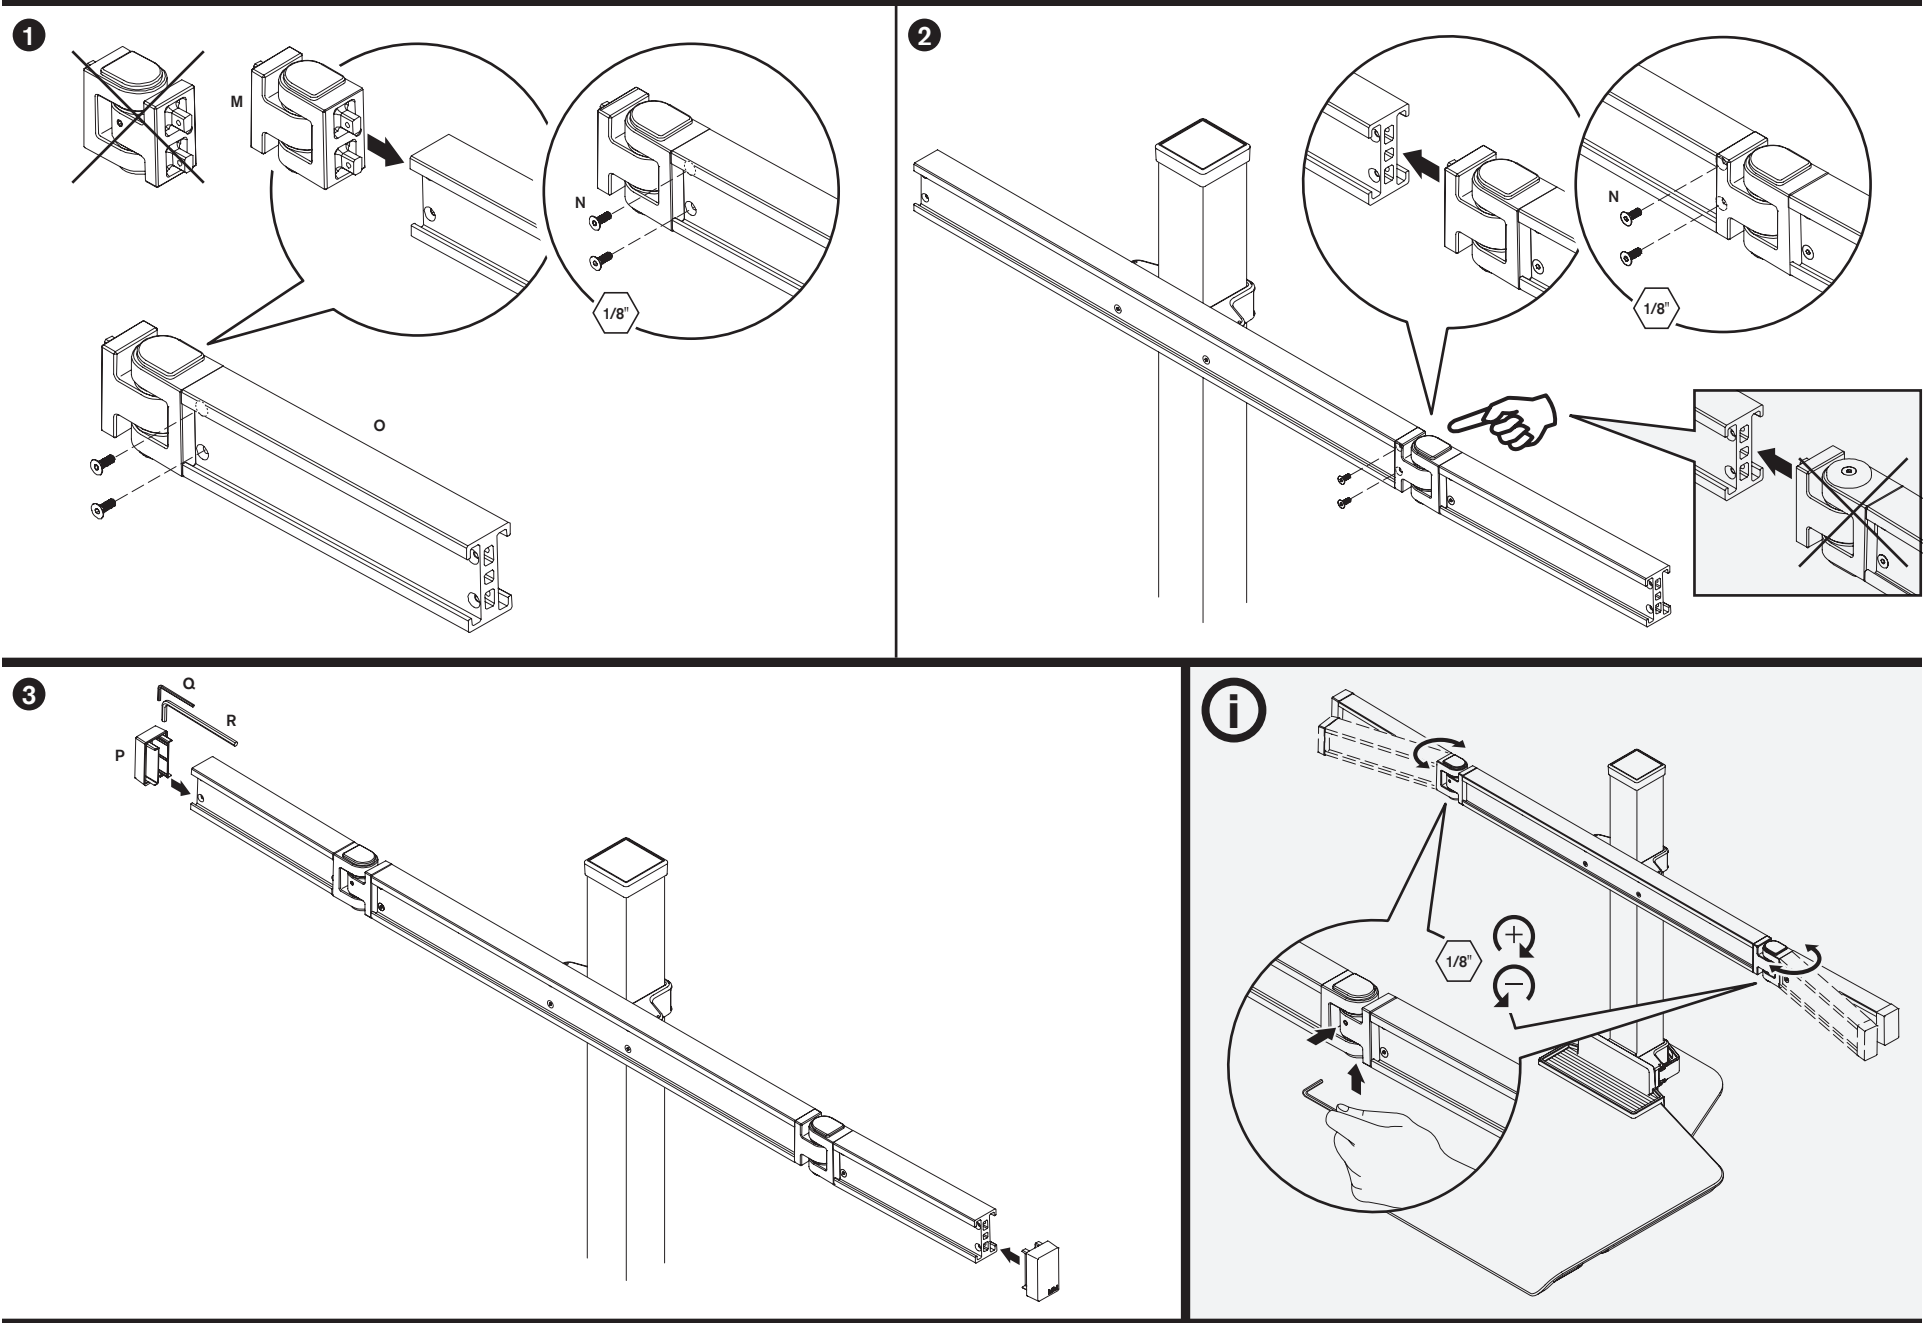


STEP 6

MONITOR TILTER

 
STANDARD FILTER & SPRING FILTER

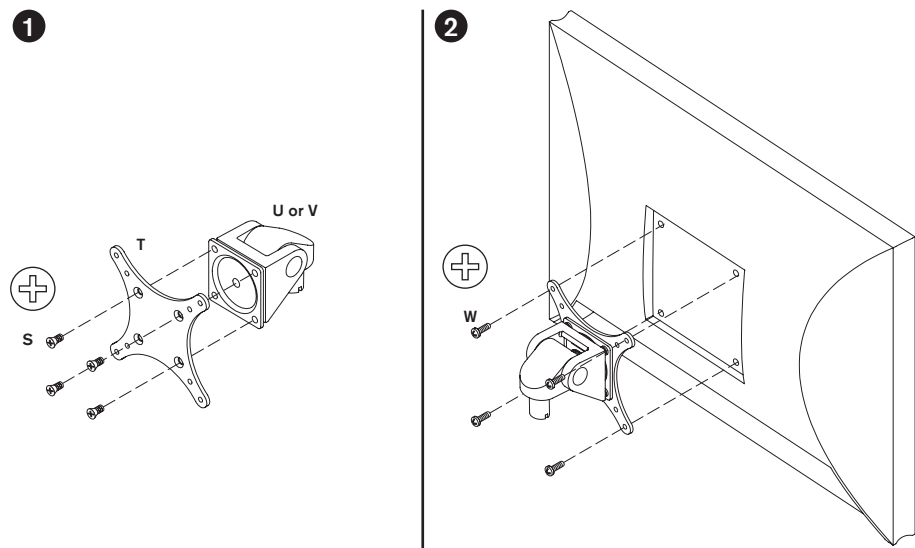

QUICK RELEASE FILTER

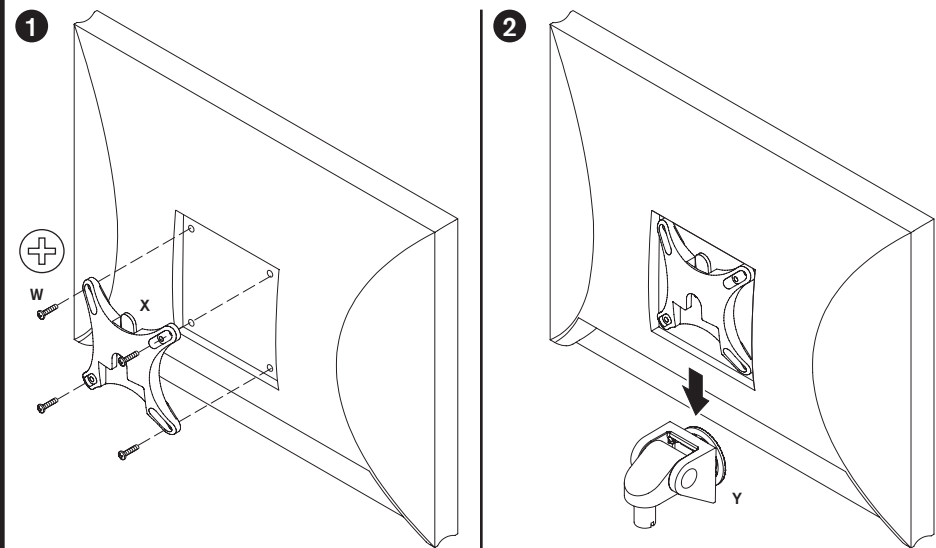 


FINE TUNE HEIGHT ADJUST TILTER

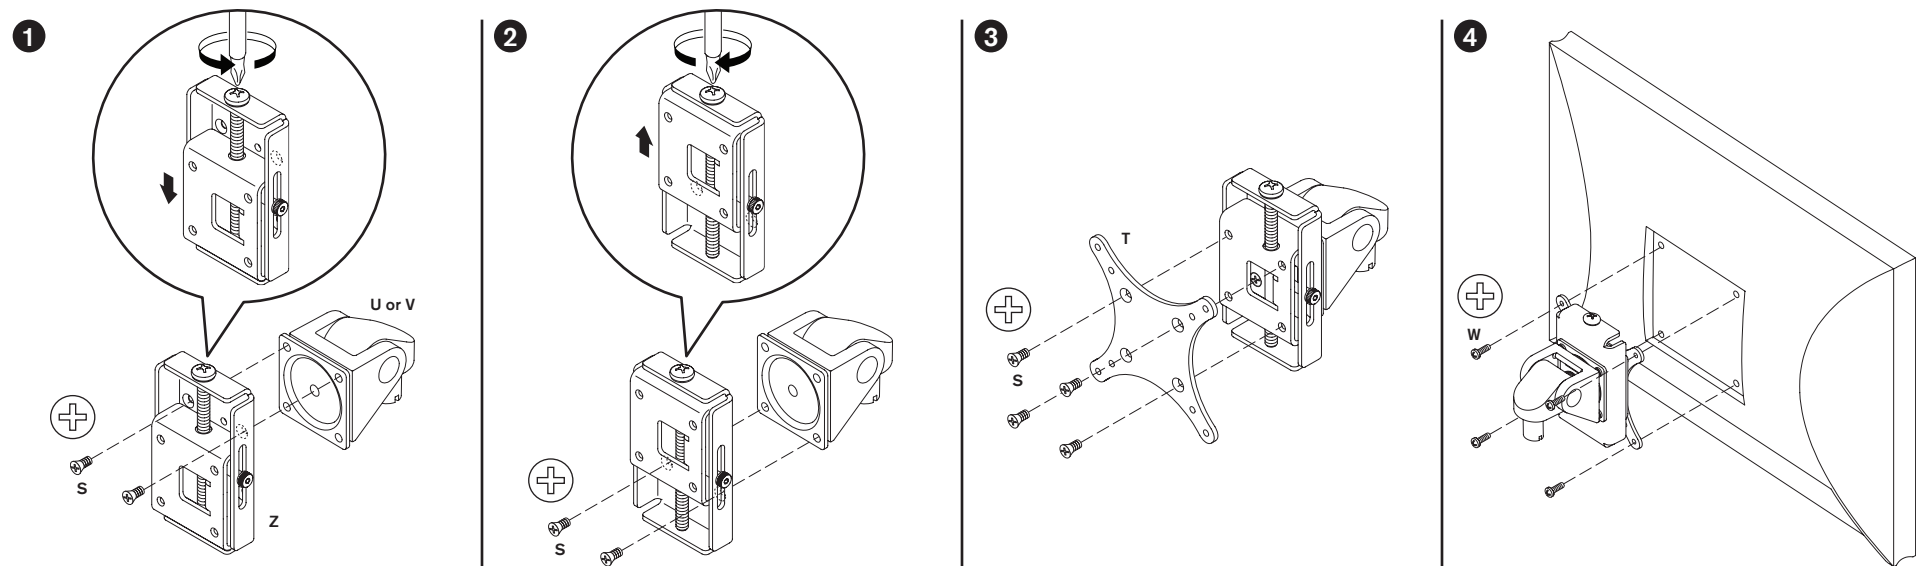 



STEP 7

 MONITOR CUPS

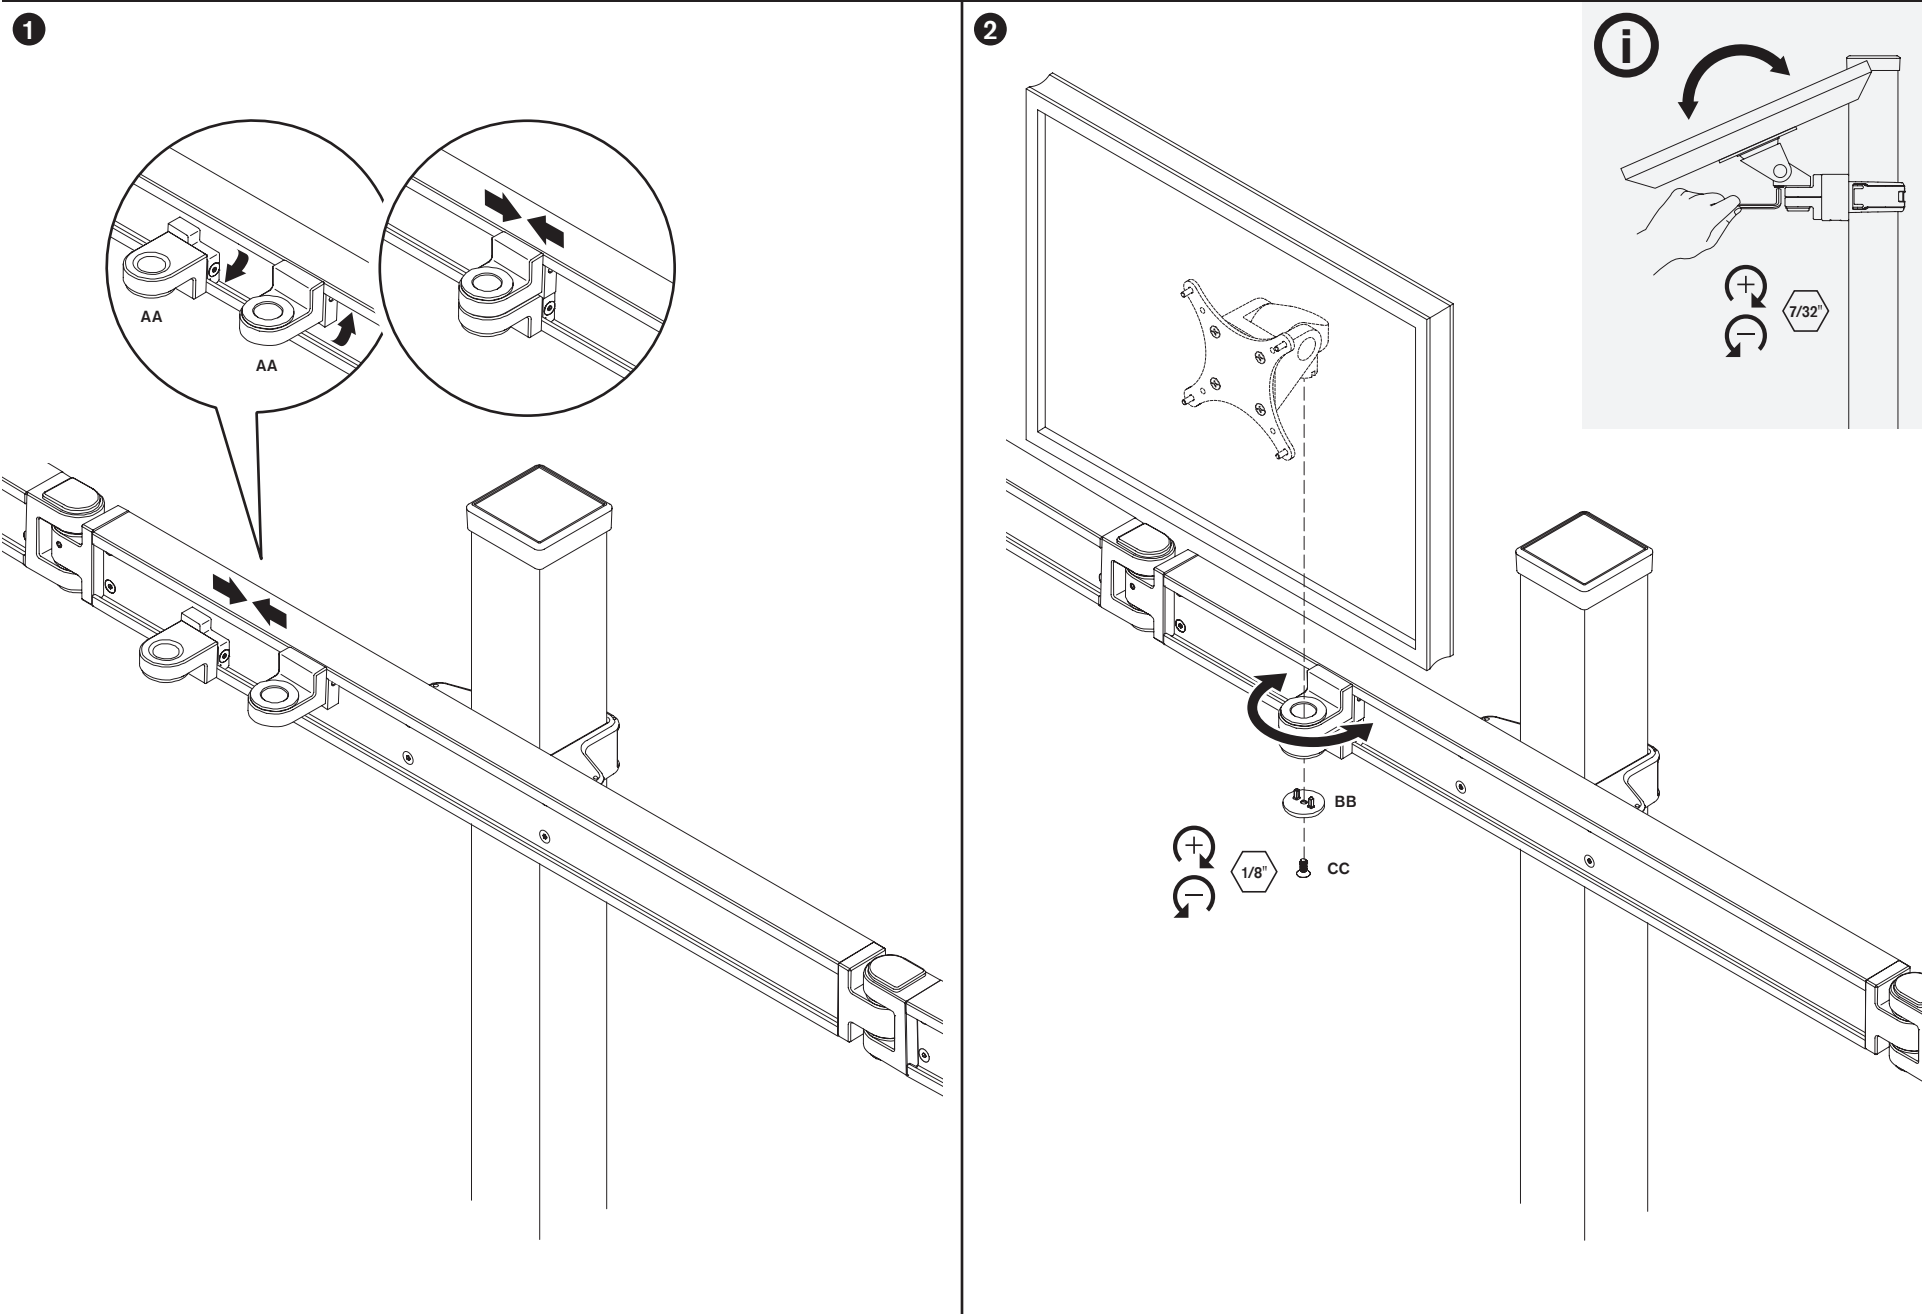


STEP 8

  CABLE MANAGEMENT

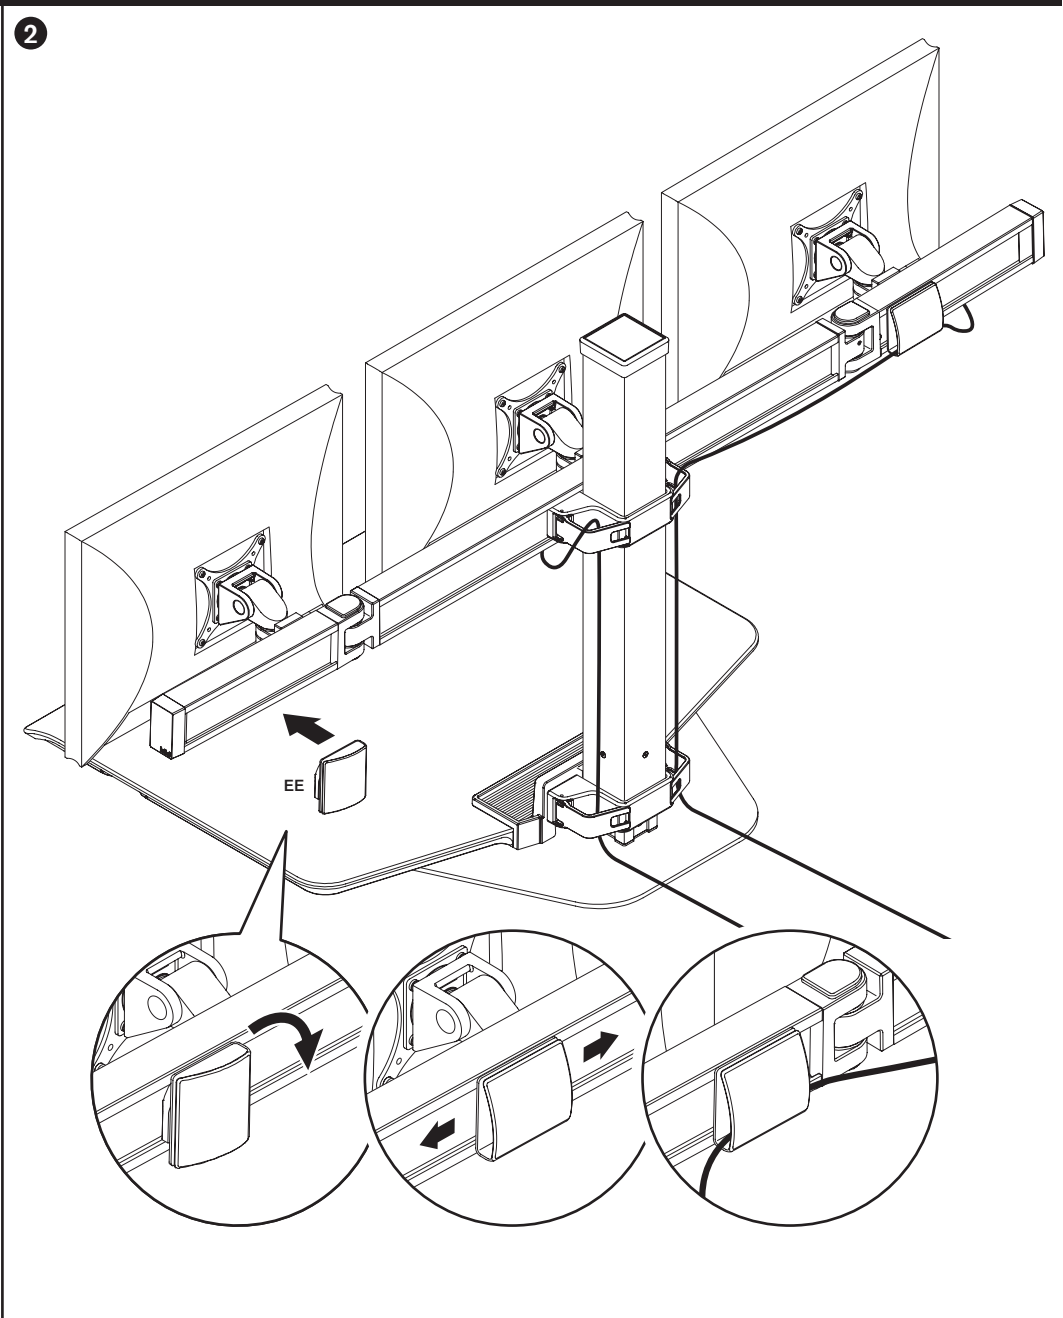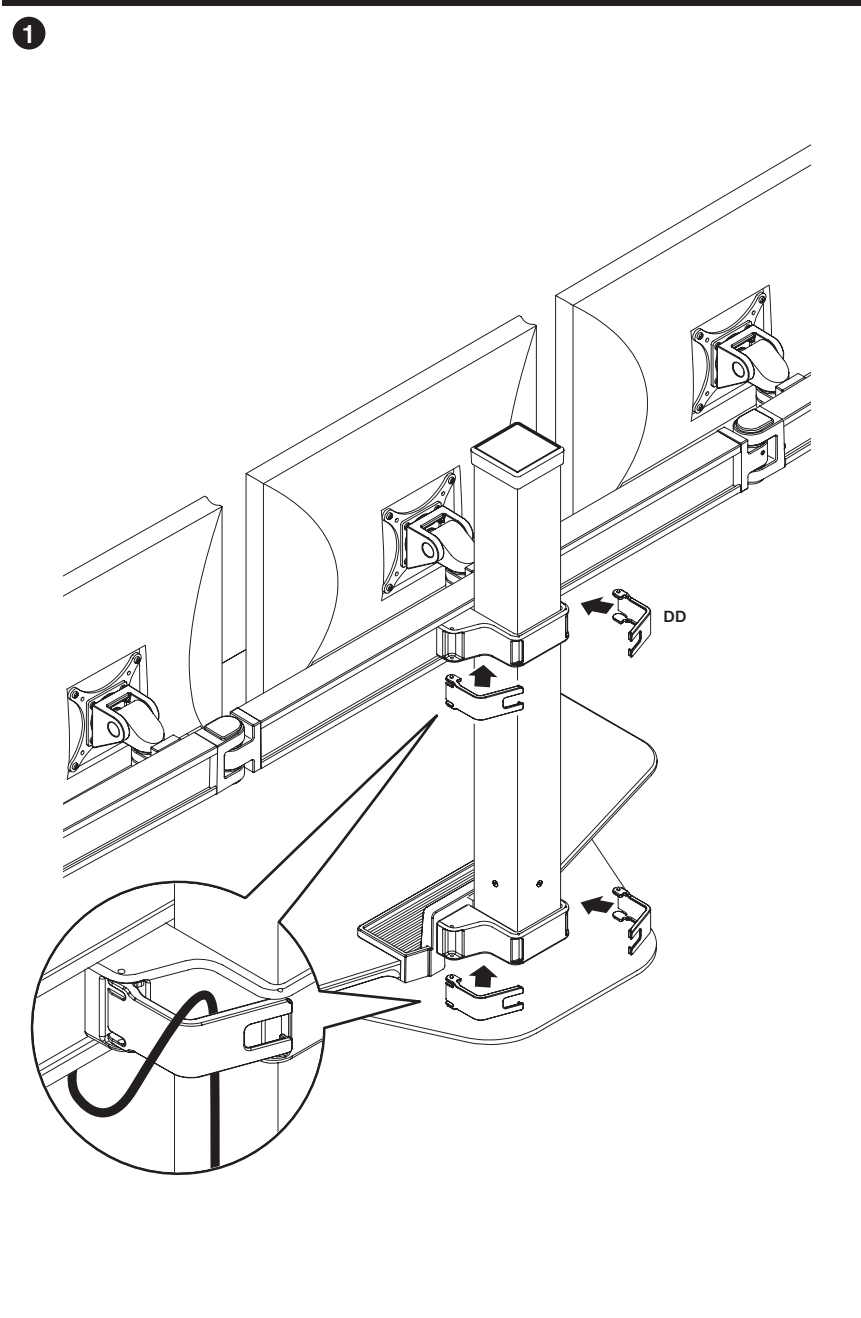

HEIGHT ADJUSTMENT

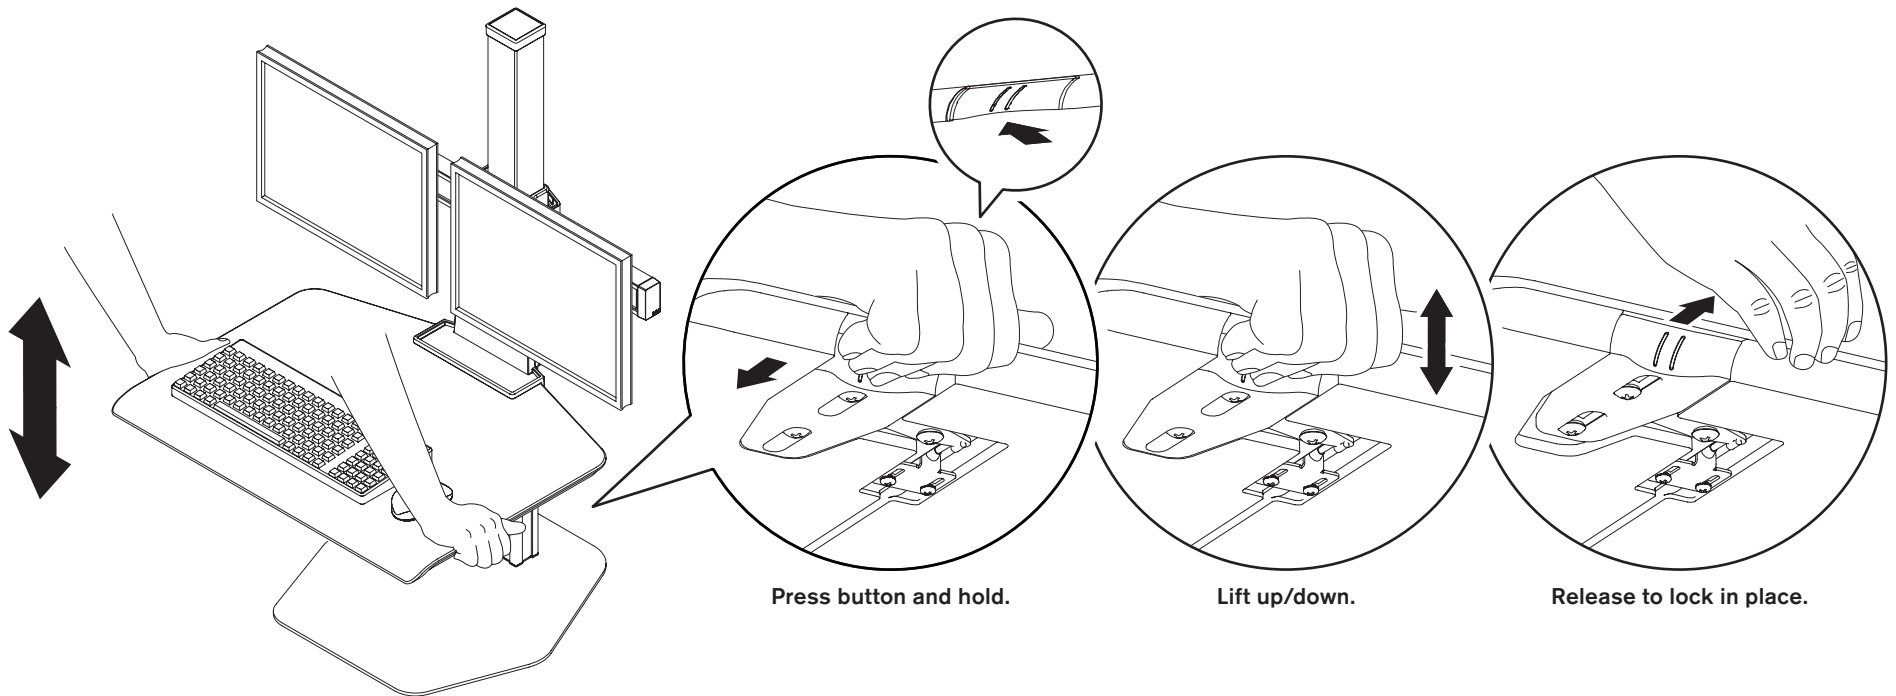 

Is your height adjust button not working? If so, make the adjustments below.

- 1 Slide workstation so that the work surface hangs over desk edge to allow access to underneath the work surface.
- 2 Loosen the two screws as shown.
- 3 Slide bracket in the direction shown and tighten screws.
- 4 Test height adjust button – readjust by repeating the steps above as necessary.

