
INSTALLATION INSTRUCTIONS

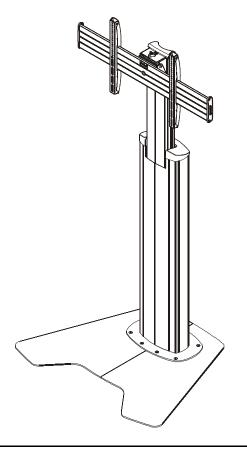

Height Adjustable Video Stand



LFAU

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the LFAU up to (and including) the display does not exceed 200 lbs (90.7 kg). Use with heavier televisions may result in instability causing tip over resulting in death or serious injury!

WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.



WARNING: Do not use this product outdoors.

WARNING: RISK OF SERIOUS INJURY OR DEATH! Placing a remote control or toy on the stand may encourage a child to climb onto the stand causing the stand to tip over onto the child. DO NOT place remote controls or toys on the stand!


WARNING: RISK OF SERIOUS INJURY OR DEATH! Relocating audio and/or video equipment to the stand may result in the stand collapsing or overturning onto a child. DO NOT relocate audio and/or video equipment to the stand!

NOTE: The LFAU stand has no user serviceable parts.

NOTE: The LFAU stand can support screen sizes up to a maximum of 90" wide.


--SAVE THESE INSTRUCTIONS--

DIMENSIONS

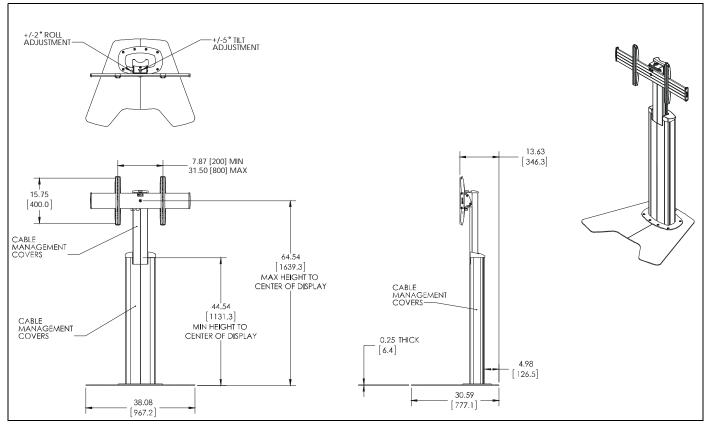


	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
(🔫	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
(F)	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench Llave de boca	Remove Quitar
/11	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Onlave a punce aperce	Kindovere
	Steeksleutel	Verwijderen
0	Steeksleutel	Verwijderen Retirez
	Clé à fourche	Retirez
	Clé à fourche By Hand	Retirez Optional
	Clé à fourche By Hand A mano	Retirez Optional Opcional
	Clé à fourche By Hand A mano Von Hand	Retirez Optional Opcional Optional
E A S	Clé à fourche By Hand A mano Von Hand Com a mão	Retirez Optional Optional Optional Optional Optional
	Clé à fourche By Hand A mano Von Hand Com a mão A mano	Retirez Optional Opcional Optional Opcional Opcional Opcional Opcional
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand	Retirez Optional Opcional Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcionale Optie
	Clé à fourche By Hand A mano Von Hand Com a mão A mano	Retirez Optional Opcional Optional Opcional Opcional Opcional Opcional
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand	Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcional Opcional Opcionale Optie
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main	Retirez Optional Opcional Opcional Opcional Opcional Opzionale Optie En option
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench	Retirez Optional Opcional Opcional Opcional Opcional Opcional Optie En option Security Wrench
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal	Retirez Optional Opcional Optional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel	Retirez Optional Opcional Disconal Opcional Disconal Opcional Disconal Opcional Opcional Opcional Disconal Opcional Opcional
	Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Retirez Optional Opcional Optional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança

TOOLS REQUIRED FOR INSTALLATION

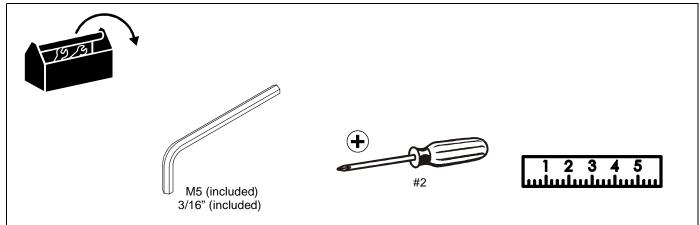




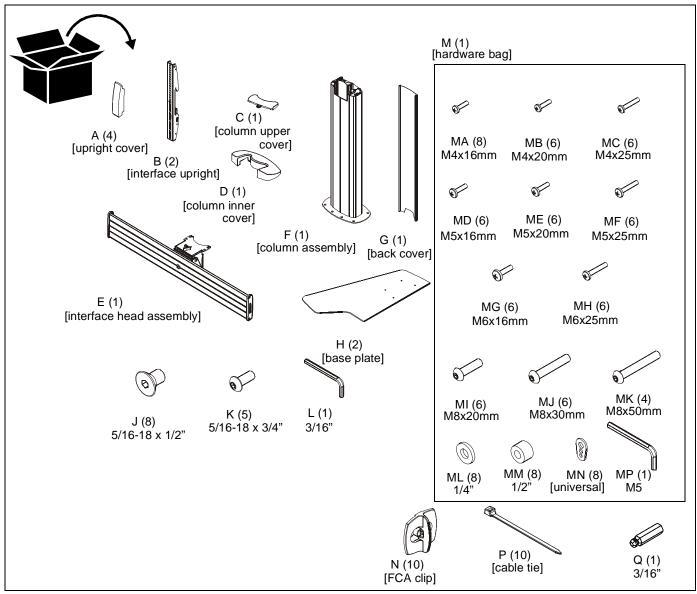

Assembly And Installation

CAUTION: Attachment holes may be damaged if a power drill is used to insert button head cap screws. Screws should first be inserted and turned BY HAND with the hex key or with a hand-held screwdriver BEFORE using the hex head drill bit and power drill to complete the attachment.

1. Use eight 5/16-18 x 1/2" flat head cap screws (J) to secure two base plates (H) to column assembly (F). (See Figure 1)

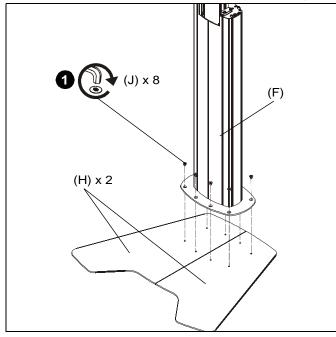



- 2. Slide interface head assembly (E) into column assembly (F). (See Figure 2)
- Use four 5/16-18 x 3/4" button head cap screws (K) to secure interface head assembly (E) to column assembly (F). (See Figure 2)

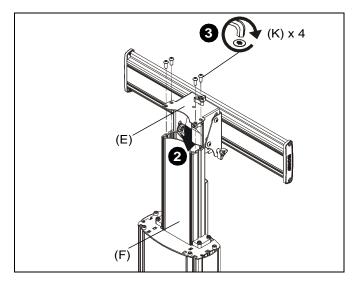


Figure 2

- Use remaining 5/16-18 x 3/4" button head cap screw (K) to secure column upper cover (C) to interface head assembly (E). (See Figure 3)
- 5. Snap column inner cover (D) onto column assembly (F). (See Figure 3)

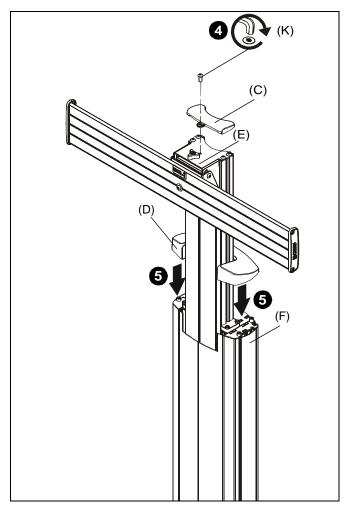


Figure 3

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the LFAU up to (and including) the display does not exceed 200 lbs (90.7 kg). Use with heavier televisions may result in instability causing tip over resulting in death or serious injury!

1. Lay display face down on protective surface.

CAUTION: Using screws of improper diameter may damage your display! Proper screws will easily thread into display mounting holes.

- Select screw *diameter* by examining hardware (MA-MK) (4mm, 5mm, 6mm or 8mm) and comparing with mounting holes on display. (See Figure 4)
- 3. Select spacers: (See Figure 4)
 - If mounting holes are not recessed and both uprights (B) can lay flat against display, then no spacers are required.
 - If mounting holes are recessed, or if protrusions prevent uprights (B) from laying flat, then spacers (ML or MM) must be used.

CAUTION: Using screws of improper length may damage your display! Proper screws will have adequate thread engagement without contacting bottom of display mounting holes.

- 4. Select screw length: (See Figure 4)
 - Using your hand, insert SHORTEST length screw of selected diameter (MA, MD, MG or MI) through universal washer (MN), uprights (B), selected spacer (ML or MM), into display mounting hole. Do NOT thread screw into hole at this time.
- **NOTE:** Universal washers (MN) are not needed if using M8 button head cap screws (MI, MJ or MK).
 - Proper screw length requires base of screw head to protrude above flat washer a *distance equal to* or greater than the screw diameter. If screw length is inadequate, select longer screw. Select shortest screw which will protrude the required distance.
- 5. Place uprights (B) on display, ensuring: (See Figure 4)
 - Center of uprights (B) are as close to the center of the back of display as possible after being installed. Center of bracket is indicated by the diamond-shaped hole.
- 6. Use selected screws and spacers to install two interface uprights (B) to back of display. (See Figure 4)

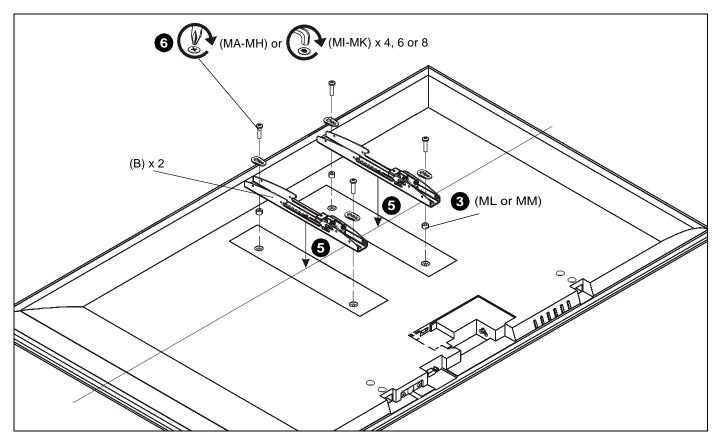


Figure 4

WARNING: Display may be very heavy! Ensure display may be safely lifted and maneuvered as required to install on stand. Failure to take adequate precautions can result in serious personal injury or damage to equipment!

- 7. Position latches on interface uprights so that they are in the "open" position. (See Figure 5)
- 8. Hang interface uprights (B) on interface head assembly (E). (See Figure 5)


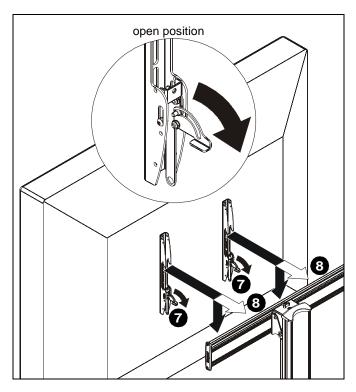


Figure 5

IMPORTANT ! : In order to ensure an even mount, install uprights to be centered over column assembly. Do NOT install both uprights to the same side of column assembly! (See Figure 6)

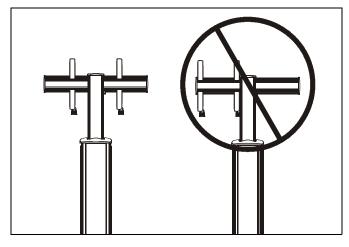

9. Move latches on interface uprights to the "closed" position to secure display to head assembly. (See Figure 7)

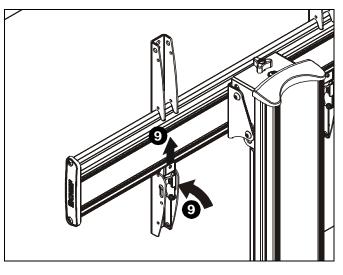


Figure 7

- 10. Snap four upright covers (A) onto uprights. (See Figure 8)
- **NOTE:** Tabs on inside of covers (A) will snap directly into holes on uprights to ensure a secure connection.

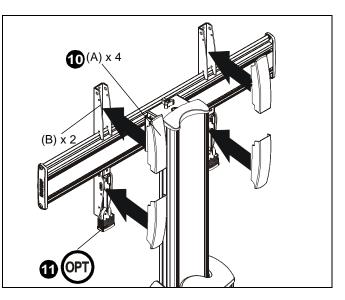


Figure 8

11. (Optional) Use padlocks (not provided) to secure uprights to head assembly. (See Figure 8)

Figure 6

Cable Management

- **NOTE:** The following cable management options may vary based on type of display being mounted and user preference.
- 1. Place FCA clip (N) into groove on back of Fusion mount with clip handle in a vertical position. (See Figure 9)
- 2. Rotate FCA clip (N) 90° in either direction until clip handle is in a horizontal position. (See Figure 9)
- 3. Repeat Steps 1-2 for all clips to be installed.


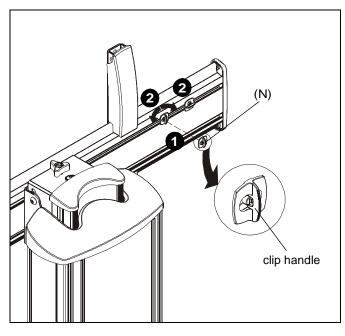


Figure 9

- 4. Route cables along FCA clips to be used for cable management. (See Figure 10)
- 5. Use cable ties (P) to secure cables to FCA clips. (See Figure 10)

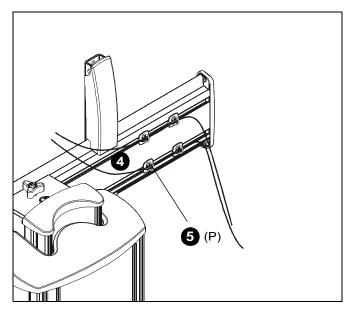

6. Route cables from display through front channel of column assembly. (See Figure 11)

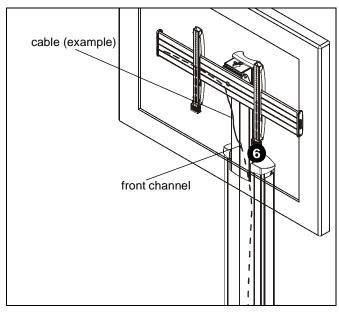


Figure 11

- 7. Route cables down column channel, tucking them behind height-adjustment carriage and underneath bracket holding height-adjustment shaft. (See Figure 12)
- Snap back cover (G) onto back of column assembly making sure cables fit through opening at bottom of cover. (See Figure 12)

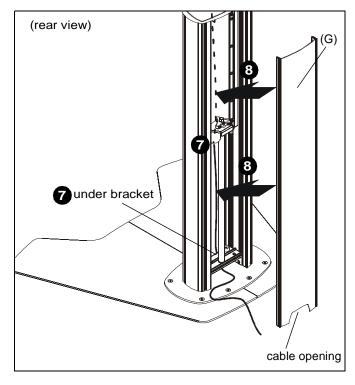


Figure 12

LFAU



Adjustments

Height Adjustment

- 1. Remove cable cover (G) to expose height adjustment knob.
- 2. Turn height adjustment knob clockwise to raise display. (See Figure 13)
- 3. Turn height adjustment knob counterclockwise to lower display. (See Figure 13)

WARNING: Do not attempt to raise or lower the adjustment carriage beyond its upper or lower limit. High and low points are shown in Figures 13 and 14.

- **NOTE:** A 1/2" socket wrench may also be used to adjust height by turning bolt just above height adjustment knob.
- 4. Reinstall cable cover (G) to column assembly.

height adjustment knob 2 3 high point 3 0 0



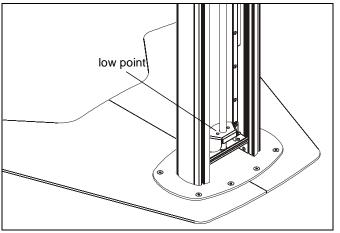


Figure 14

Pitch Adjustment

- 5. Turn pitch adjustment knob clockwise to tilt display forward. (See Figure 15)
- 6. Turn pitch adjustment knob counterclockwise to tilt display back. (See Figure 15)

Roll Adjustment

- 7. Turn roll adjustment knob clockwise to adjust roll to the left. (See Figure 15)
- 8. Turn roll adjustment knob counterclockwise to adjust roll to the right. (See Figure 15)

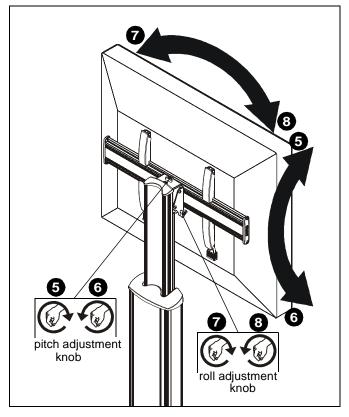


Figure 15

Stand Use and Maintenance

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located between the LFAU up to (and including) the display does not exceed 200 lbs (90.7 kg).

WARNING: RISK OF SERIOUS INJURY OR DEATH! Placing a remote control or toy on the stand may encourage a child to climb onto the stand causing the stand to tip over onto the child. DO NOT place remote controls or toys on the stand!

WARNING: RISK OF SERIOUS INJURY OR DEATH! Relocating audio and/or video equipment to the stand may result in the stand collapsing or overturning onto a child. DO NOT relocate audio and/or video equipment to the stand!

WARNING: STAND CAN TIP OVER RESULTING IN RISK OF INJURY. Never move the stand when displays are attached. Never push against the stand.

NOTE: The LFAU stand has no user serviceable parts.

- **NOTE:** The LFAU stand can support screen sizes up to a maximum of 90" wide.
- 1. Always place stand on a level surface.

Removing Display from Stand

- 1. Remove any padlocks from interface uprights if installed.
- 2. Position latches on interface uprights so that they are in the "open" position. (See Figure 16)

WARNING: DISPLAYS MAY WEIGHT IN EXCESS OF 40 LBS! Always use two people and proper lifting techniques when installing or positioning display on stand.

3. Carefully lift display from stand. (See Figure 16)

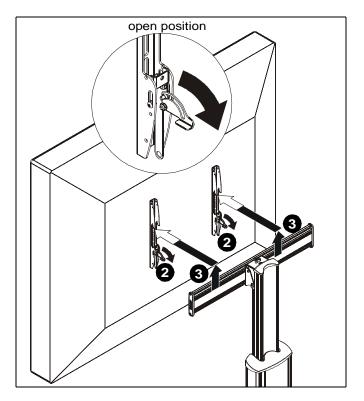


Figure 16



Chief, a products division of Milestone AV Technologies

8800-002511 Rev02 ©2014 Milestone AV Technologies www.chiefmfg.com 01/14

USA/International

Europe

Asia Pacific

- A 6436 City West Parkway, Eden Prairie, MN 55344
- **P** 800.582.6480 / 952.225.6000
- **F** 877.894.6918 / 952.894.6918
- A Franklinstraat 14, 6003 DK Weert, Netherlands
- **P** +31 (0) 495 580 852
- **F** +31 (0) 495 580 845
- A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong
- P 852 2145 4099
- **F** 852 2145 4477

