


Assembly Instructions - The Boa



Tools Required

- 1 x 8mm hex key (Wall mount only)
- 1 x 5mm hex key
- 1 x 4mm hex key
- 1 x 3mm hex key
- 1 x 19mm Wrench (Through desk & Cable grommet only)

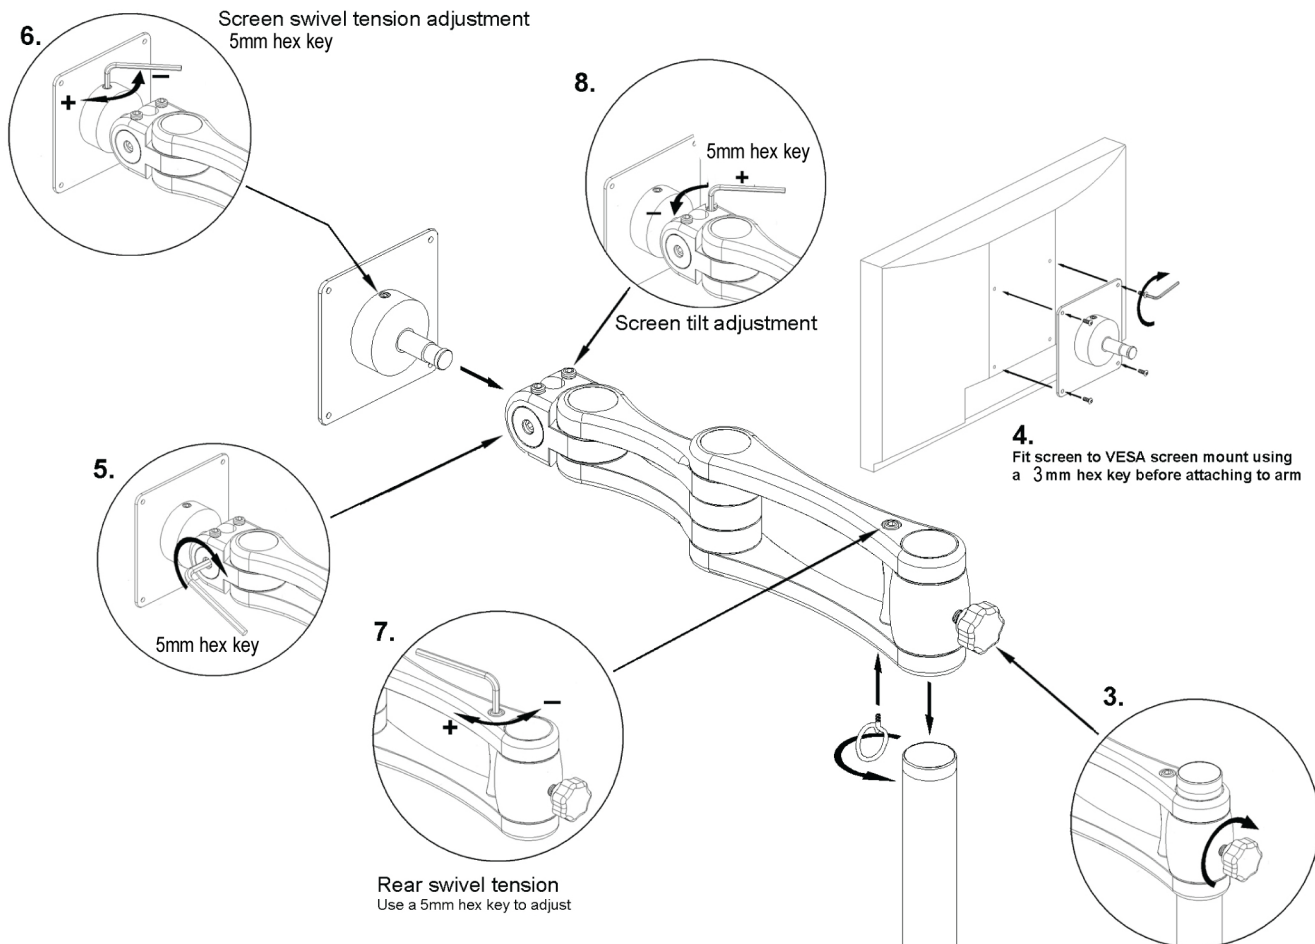