



Mounting Template


Tools Required
Level
Stud Finder ("edge to edge"
stud finder is recommended)
Drill
3/16" (5mm) drill bit for wood studs,
13/32" (10mm) drill bit for concrete

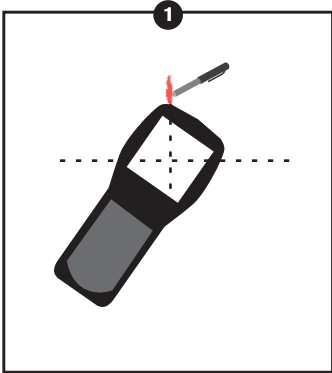


Locate center of stud
and draw vertical line
down the center

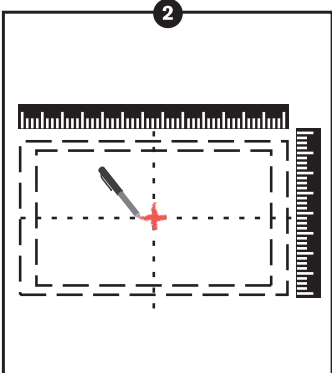

Mark desired center
of screen on the wall

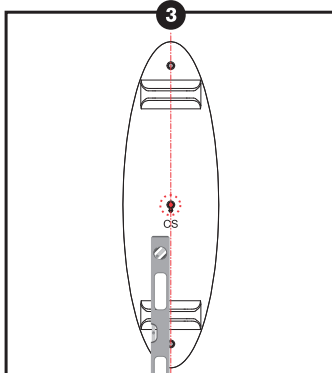

Level wall plate template
on wall and align center slot
with center of screen mark

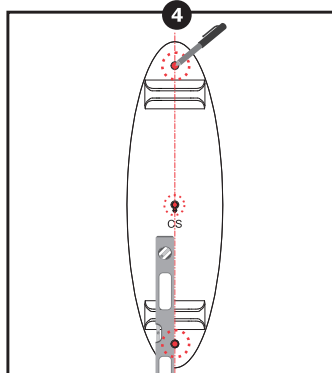

Mark each mounting hole

