


#### Step 8. Display Alignment

Set the height and position of the Notebook Tray and Monitor as desired.

The height can be adjusted by unlocking the Handgrips (see Steps 3, D and E).

For the optimal position of your display, refer to the Ergonomic Guidelines in your 'User Operating Card'.

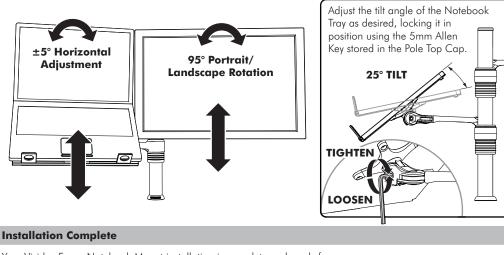

Your Visidec Focus Notebook Mount installation is complete and ready for use.



### IMPORTANT: VF


The "User Operating Card" must be left with Visidec Focus Articulated Arm once installed.

# **VF-AT-NK** Installation Instructions

# 

Focus Notebook Mount Accessory

#### **Component Checklist**

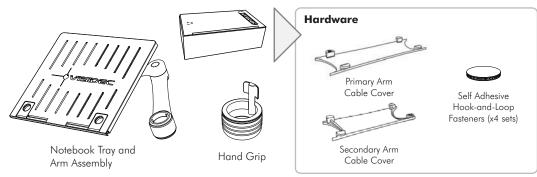

# **IMPORTANT INFORMATION**

- ! IMPORTANT Install Visidec Focus Notebook Mount as per Installation Instructions.
- ! This product is deisgned to be used in conjuction with an external keyboard and mouse.
- ! To be used with existing Visidec Focus Mount.


! Visidec Focus Notebook Mount supports Notebooks up to 18", weighing up to 8kg (171/2 lbs).

! The Manufacturer accepts no responsibility for incorrect installation.

# Step 1. Check Components


Check you have received all parts against the Component Checklist and Hardware above.

Step 2. Remove existing Arm and Monitor from Visidec Pole (ensure monitor cables are unplugged)

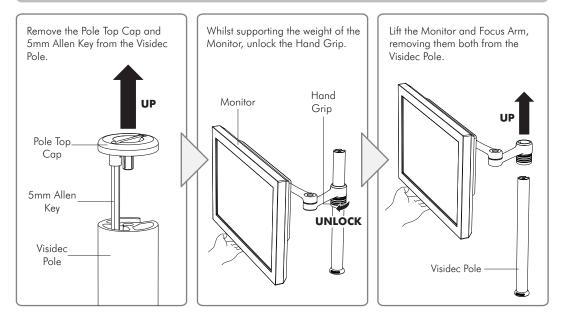

Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. Published: 06.09.12 ©

#### Step 3. Attach the new Arm Assembly onto the Visidec Pole

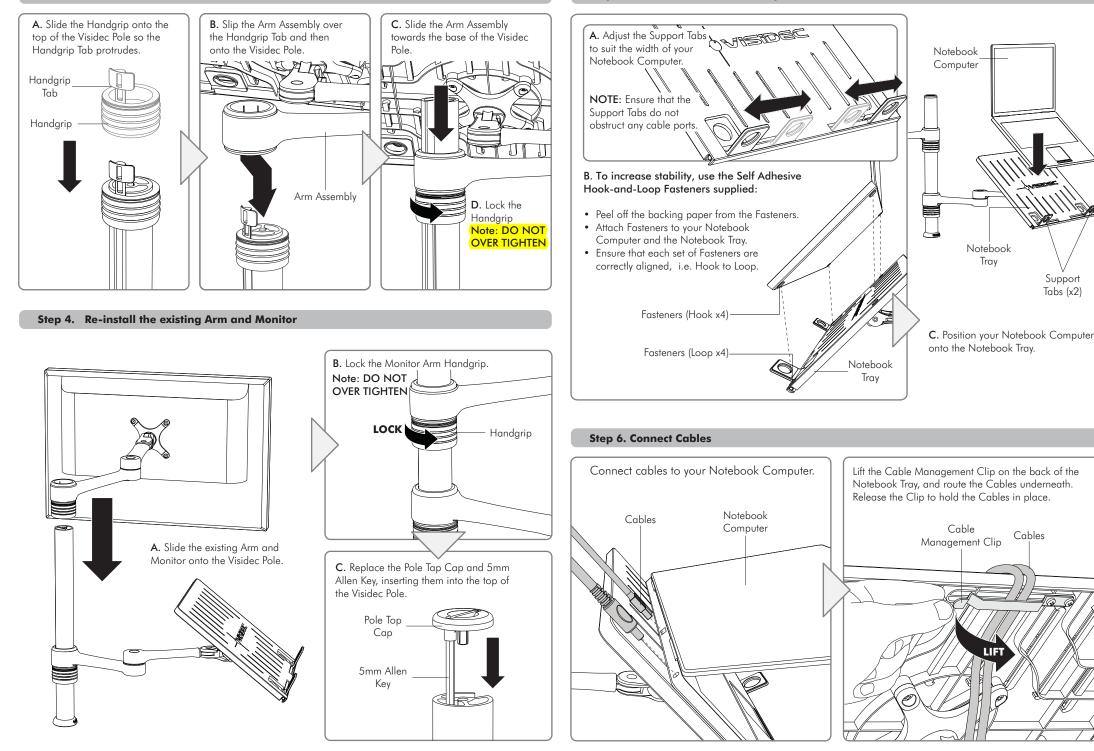

Step 5. Install the Notebook Computer