


Dual Dynamic Monitor Arms on 135 Post



INDEX

Component Checklist	Page 2
AWM 135 Post AWM-P13	Installation Instructions Page 3
AWM Dynamic Arm for Post AWM-ADTC	Installation Instructions Page 4
Cable Management	Page 6

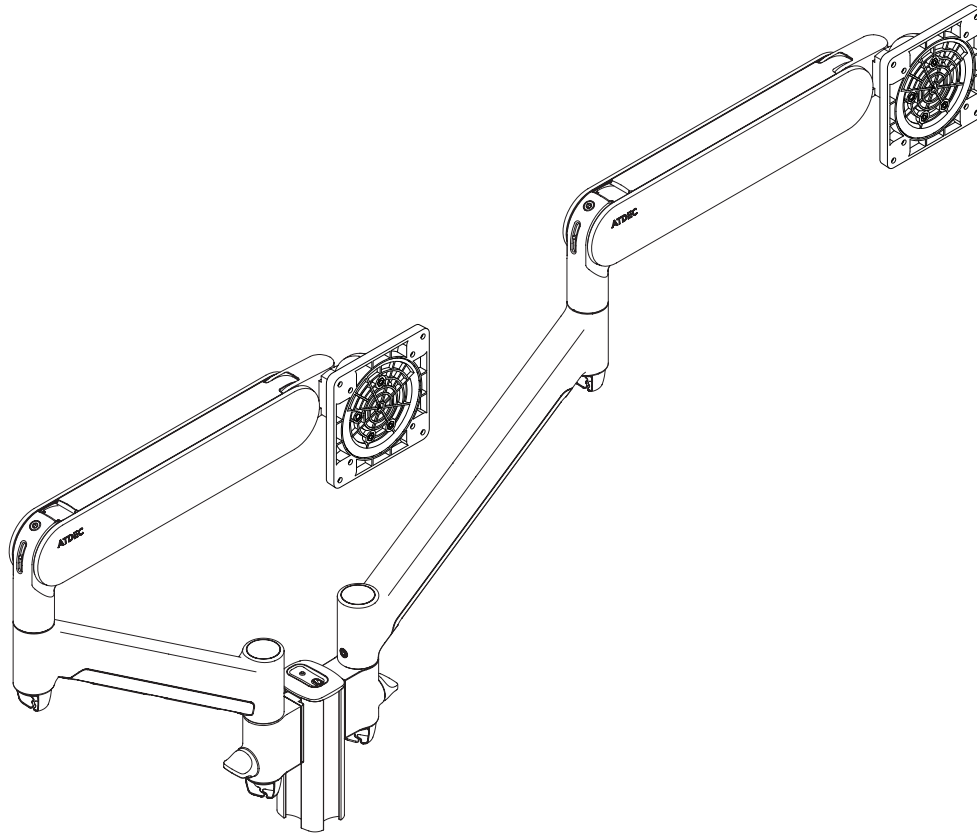

REQUIRED TOOLS

- Phillips Head Screwdriver

IMPORTANT INFORMATION

- ! **Please ensure this product is installed as per these installation instructions.**
- ! **Do not remove or throw away the plastic sleeve on the arm link and channel clamp.**
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is not suitable for outdoor use or mobile applications
- ! Do not over-tighten screws and adjustment points on product.
- ! Periodic adjustment to counterbalance and tilt tension may be required.
- ! VESA mounted accessories (such as mini PC brackets and mounts), offset VESA locations, and unevenly weighted monitors (relative to the center of the VESA mounting interface) exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.

CAPACITY



- Flat Monitors**
2 - 8kg (4.4 - 17.6lbs)
- Curved Monitors***
2 - 8kg (4.4 - 17.6lbs)

*Curved monitors with an overall depth up to 140mm (5.5").

Monitor weight should be within the weight range of all modular elements that make up the complete monitor mounting solution.

COMPONENT CHECKLIST

AWM Dynamic Arm for Post
AWM-ADTC
Product Quantity 2

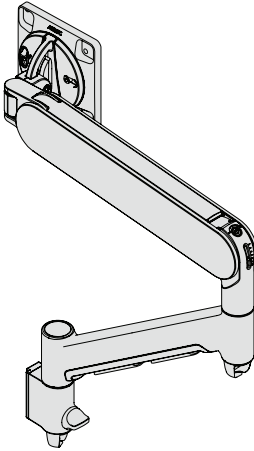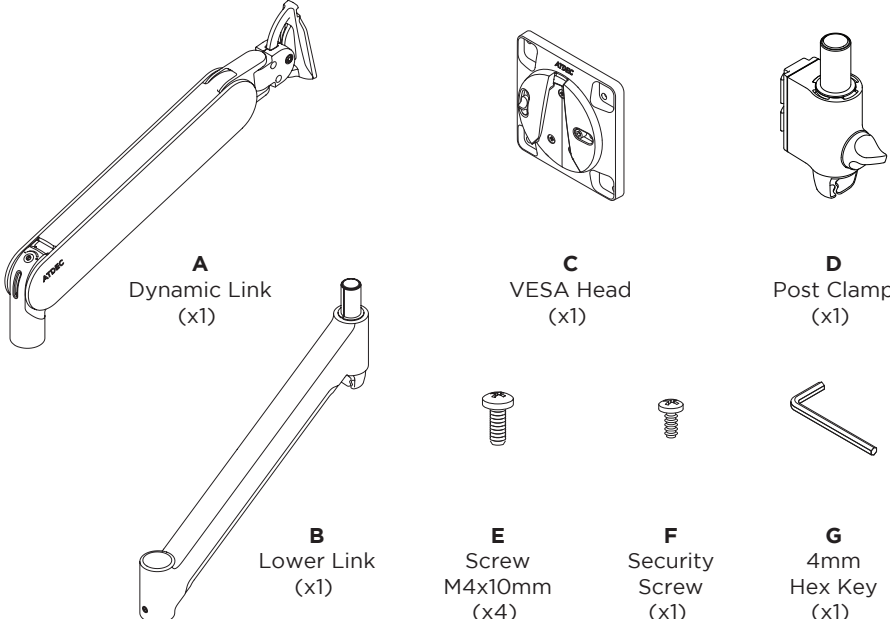A Dynamic Link (x1)

B Lower Link (x1)

C VESA Head (x1)



D Post Clamp (x1)

E Screw M4x10mm (x4)

F Security Screw (x1)

G 4mm Hex Key (x1)

135 Post AWM-P13
Product Quantity 1

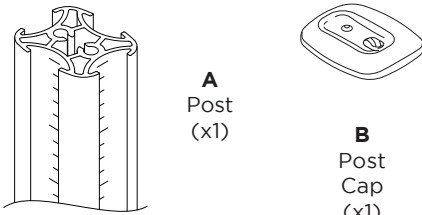A Post (x1)






B Post Cap (x1)

C Screw M8 (x2)

DESK FIXING OPTIONS


Below are the fixing options available for this solution. Fixing installation guides are supplied with the product or can be accessed through Atdec's website, along with detailed product specifications.

NOTE: Chosen desk fixing must be added to this solution code when ordering.

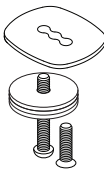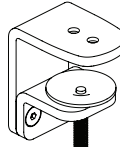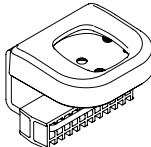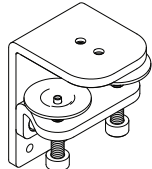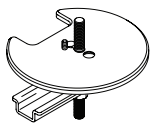
<p>BOLT THROUGH AWM-FB</p> 	<p>F CLAMP AWM-FF</p> 	<p>C CLAMP AWM-FC</p> 	<p>HEAVY DUTY F CLAMP AWM-FH</p> 	<p>GROMMET CLAMP AC-GC</p> 
---	--	--	--	---

1. Attach post to fixing


1.1 Follow the installation guide provided with your fixing to attach it to the post and fit it to the worksurface.




BOLT THROUGH
AWM-FB




F CLAMP
AWM-FF

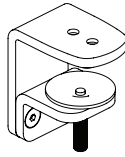


C CLAMP
AWM-FC

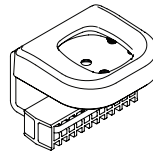

HEAVY DUTY F CLAMP
AWM-FH

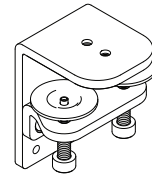


GROMMET CLAMP
AC-GC

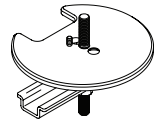


2. Attach channel clamp to post


2.1 Ensure knob is undone.

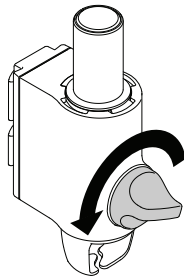

2.2 Slide channel clamp into channel.

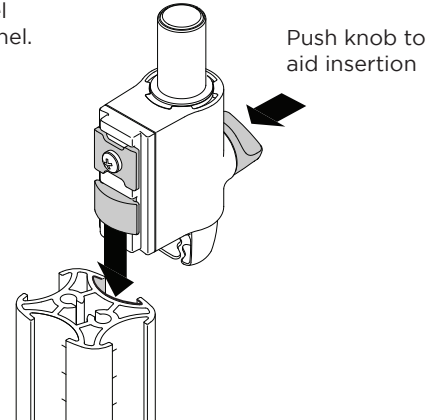

2.3 Hold clamp in desired position on channel and turn knob to lock in place.




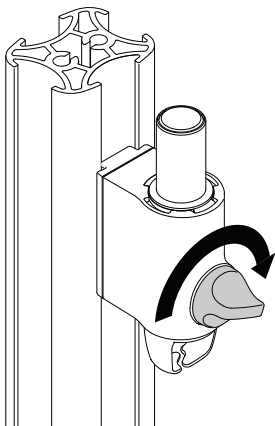


NOTE: Do not mount monitor arm on rear channel post when using the following desk clamps:

AWM-FF

AWM-FC


AWM-FH

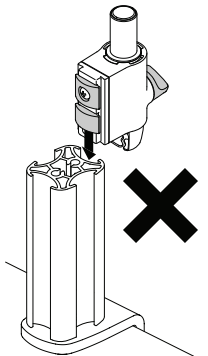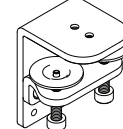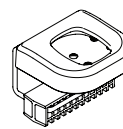

3. OPTIONAL Set arm rotation to 180°

NOTE: Rotation is set to 360° by default.


3.1 Remove plastic sleeve from channel clamp.

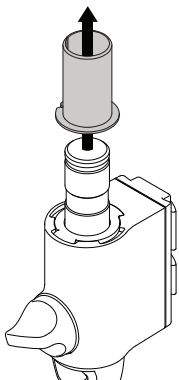


3.2 Remove rotation ring.

2. Lift

1. Press

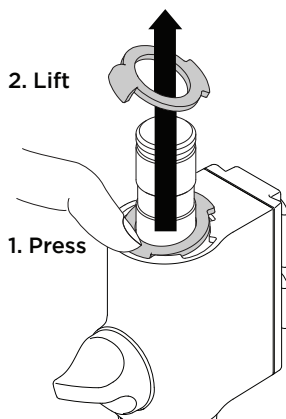

3.3 Place rotation ring in desired position and **replace** plastic sleeve.

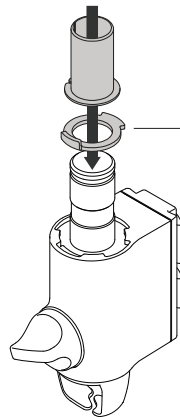


Default
Position

360°

OR

180°

Flipped
Position

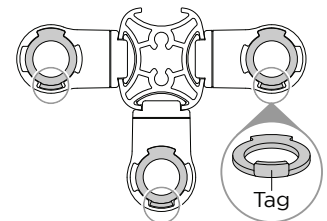

NOTE: Rotation ring placement depends on the position of the clamp on the post. The tag on the ring should always face toward the user.

4. Assemble arm links

4.1 Push two arm links together.
Do not remove the plastic sleeve.

4.2 Ensure links are fully pushed together.

4.3 Tighten set screw with 4mm hex key.

NOTE: Check that arm rotation is smooth after tightening.

5. Attach arm onto channel clamp

5.1 Push lower link onto shaft.

IMPORTANT
Ensure plastic sleeve is fitted on post clamp.

5.2 Ensure arm is fully pushed onto shaft.

5.3 Tighten joint screw.

NOTE: Check the arm rotation is smooth after tightening.

6. Attach VESA head to monitor

6.1 Check VESA mounting compatibility of monitor.

NOTE: Ensure screw length suits the monitor VESA mounting holes.

OK

Too long

Too short


6.2 Attach VESA head onto monitor with provided screws. (Alternatively, use fasteners specified by the monitor manufacturer.)

NOTE: Recessed 75x75 VESA interfaces will require a Spacer Kit (sold separately)


TIP! To allow monitor to be rotated upside down, mount VESA head in the alternate orientation shown.

NOTE: Logo position


7. Attach monitor to arm

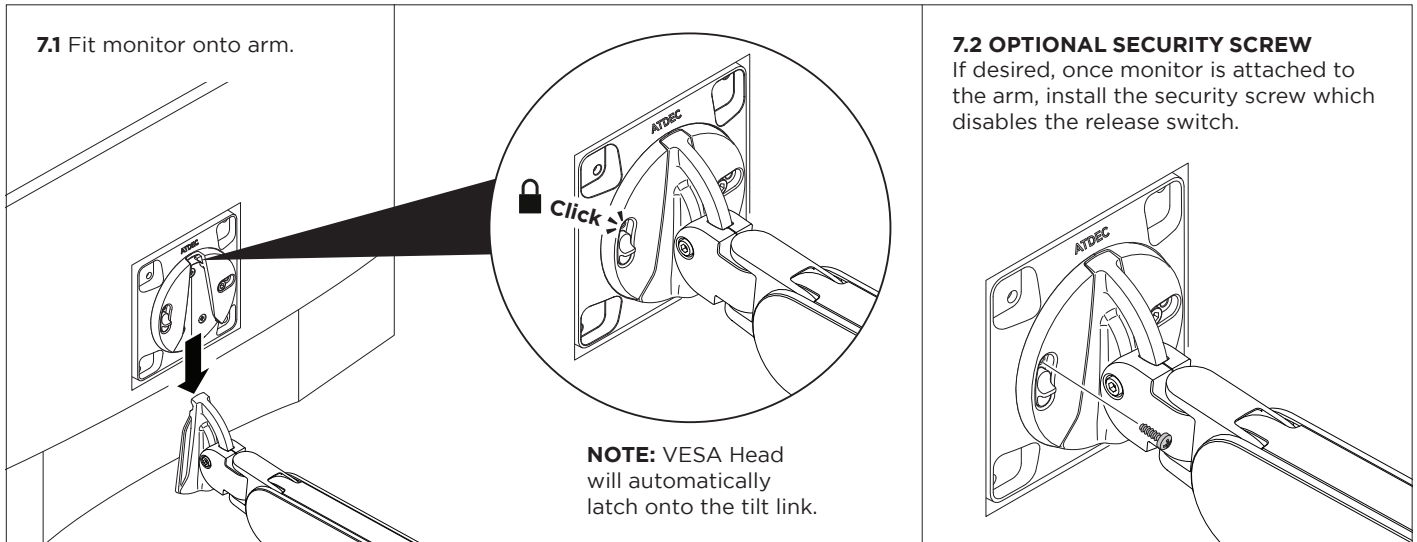


8. (OPTIONAL) Adjust tilt tension

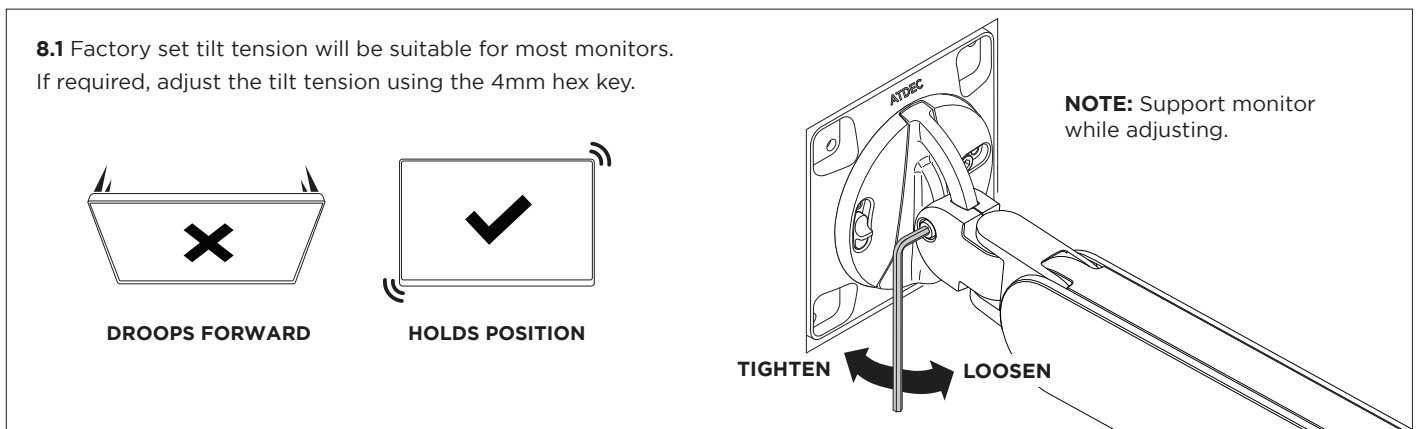

9. (OPTIONAL) Adjust rotation tension

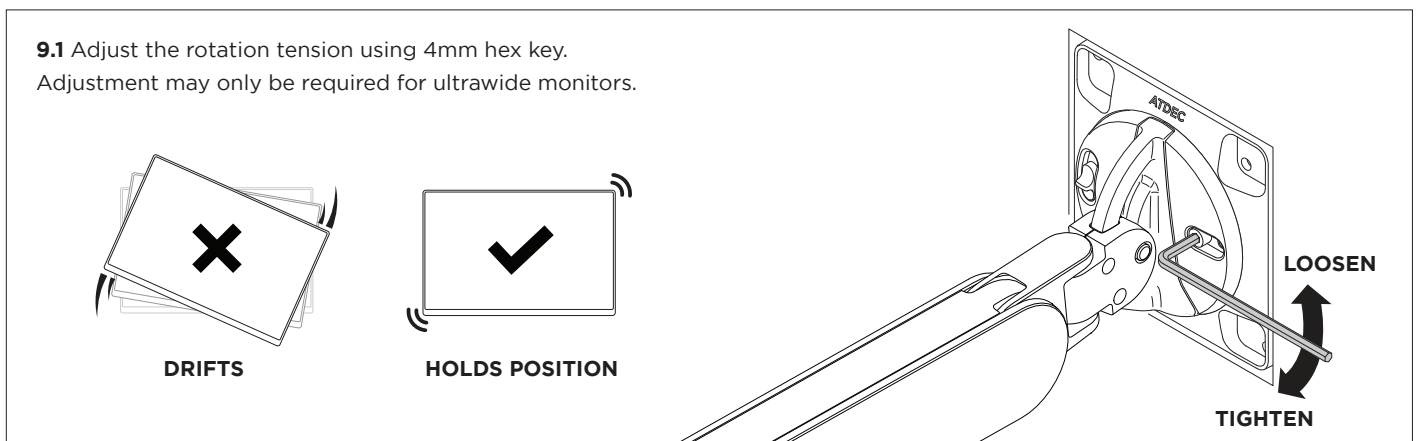


10. Removing monitor

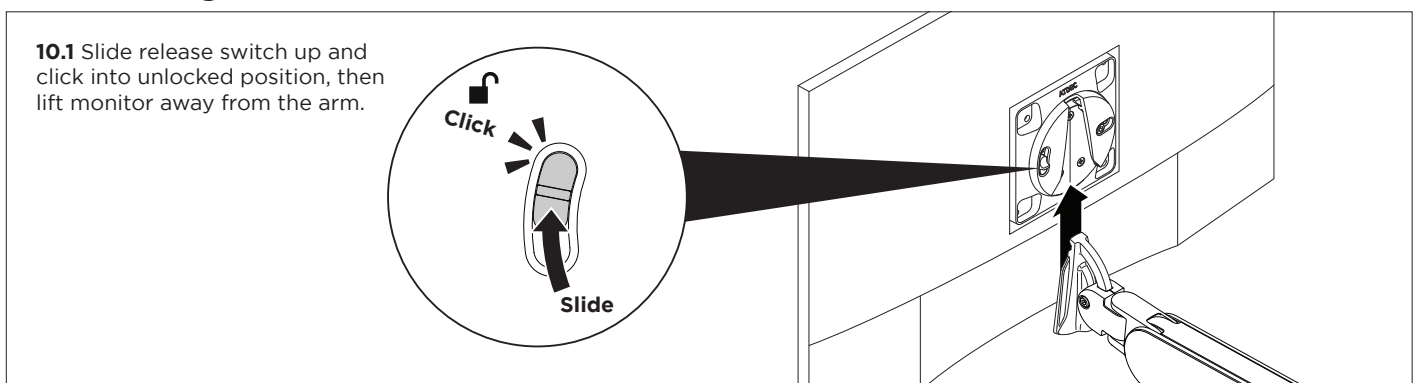


11. Adjust counterbalance tension

11.1 Using the 4mm hex key, adjust counterbalance to suit the monitor weight.

TIP! For best results, adjust counterbalance with the arm and monitor in the position shown. Adjustment is easiest when the monitor is in the highest position.


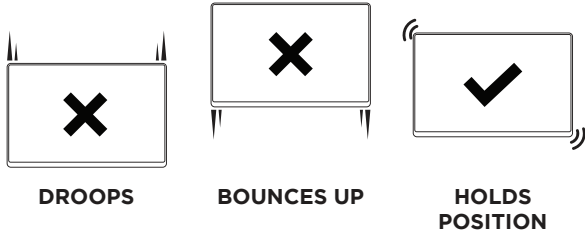


TIP! When installing multiple arms with the same monitor, use the setting on the counterbalance adjustment gauge to quickly 'pre-set' other arms (fine-tuning may be required after pre-setting).

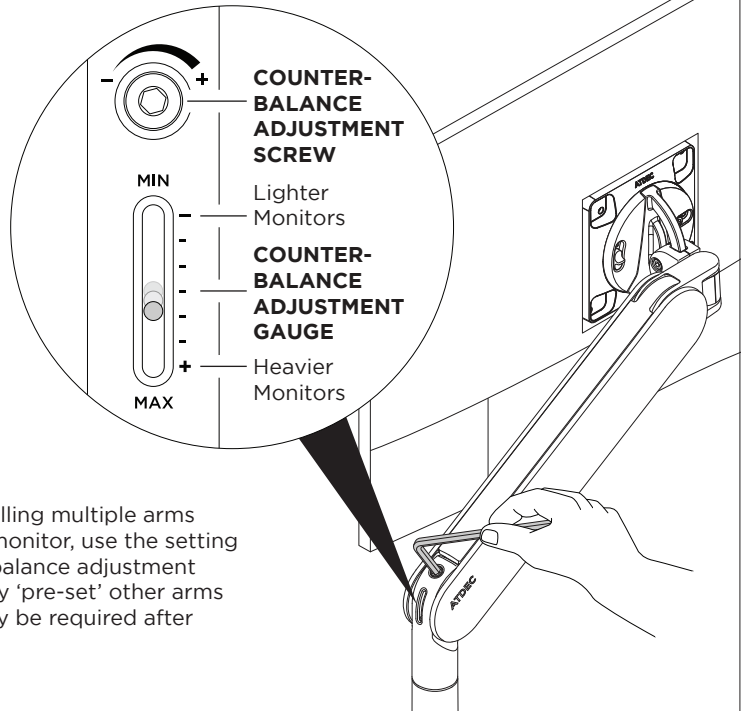


12. Monitor arm cable management


12.1 Plug cables into the monitor and route the cables down the arm using the cable clips.

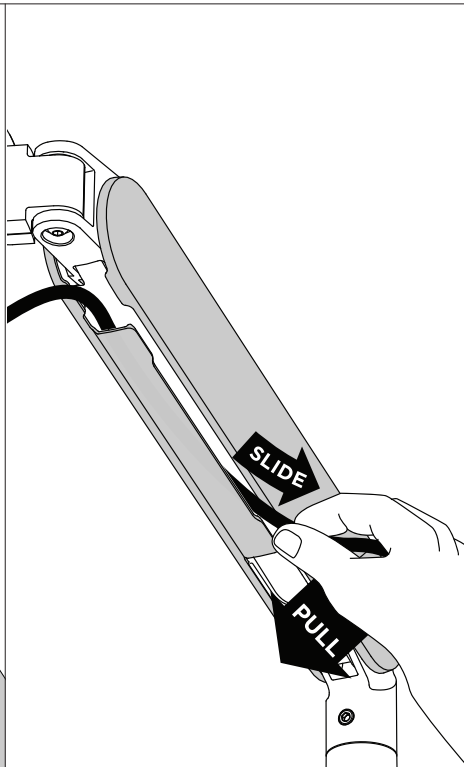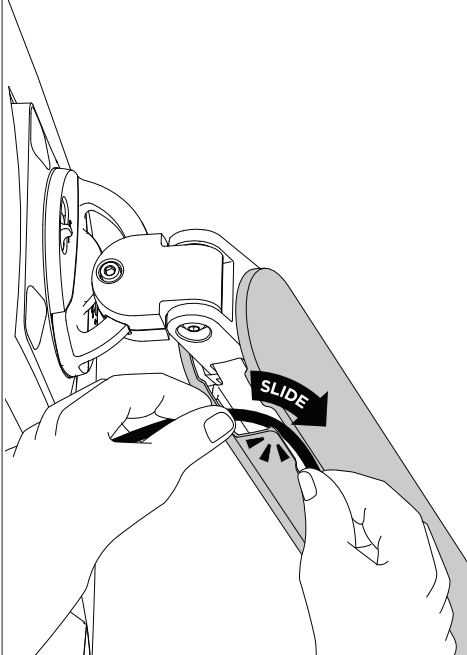

TIP! Ensure enough cable slack is given to allow for movement of the monitor.

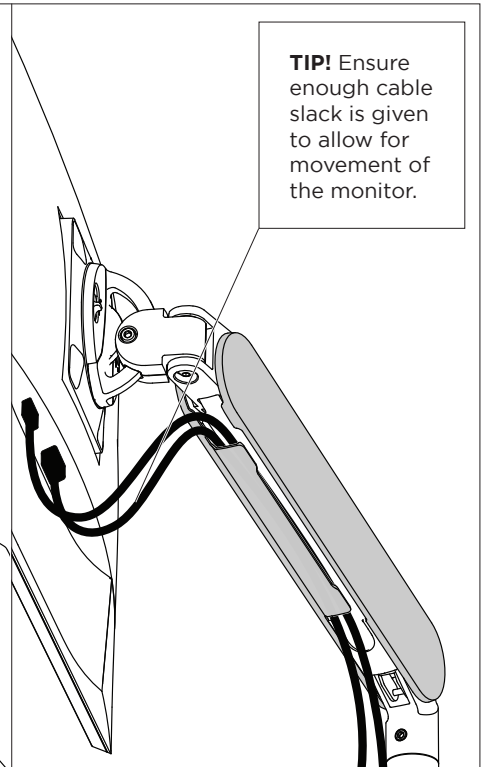

12.2 Push cables into lower arm hook flaps.

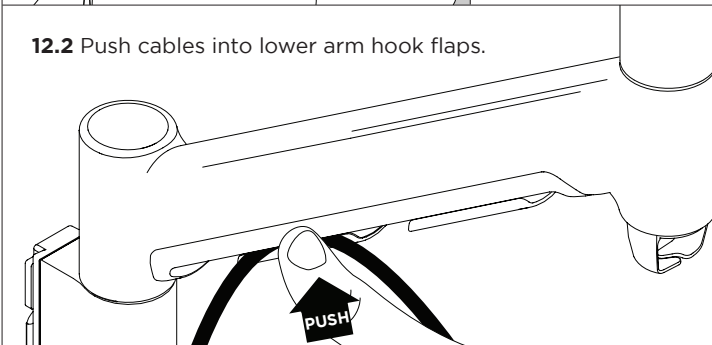

12.3 Slide the remaining loose cable from the central gap up the arm.

